

デジタルアンプ分離光電センサ レーザタイプ アンプユニット



取扱説明書

このたびは、本製品をお買い上げいただきまして、まことにありがとうございます。 ご使用に際しては、次の内容をお守りください

- ・電気の知識を有する専門家が扱ってください。
- ・この取扱説明書をよくお読みになり、充分にご理解の上、正しくご使用ください。 ・この説明書はいつでも参照できるように大切に保管ください。

オムロン株式会社

© OMRON Corporation 2005 All Rights Reserved



安全上の要点

- 以下に示す項目は安全を確保するうえで必要なことですので必ず守ってください。 1)引火性・爆発性ガスの環境では使用しないでください。
- スリ水油、化学薬品の飛沫のある場所、蒸気のあたる場所では使用しないでください。 3)製品の分解、修理・改造をしないでください。
- 4) 定格範囲を超える電圧、電流を印加しないでください。 5) 電源の極性など、誤配線をしないでください。
- 6) 負荷の接続を正しく行ってください。 7) 負荷の両端を短絡させないでください。
- 8)ケースが破損した状態で使用しないでください。 9)廃棄するときは、産業廃棄物として処理してください。

使用上の注意

- 1)電力線、動力線と本製品の配線は別配線としてください。同一配線あるいは同一ダクトにすると誘導 を受け、誤動作や破損の原因となることがあります。
- 2)コードの延長は100m以下としてください。延長には0.3mm²以上のコードをご使用ください。
- 3) 電源投入後、200ms以上経過後に検出が可能となります。
- 負荷と本製品の電源が別の場合、必ず本製品の電源を先に投入してください。
- コード引き出しタイプにて連結使用時の場合は、電源を同時に入れてください
- 連結されたセンサ間での電源投入時間差が30ms以上の場合は、相互干渉防止機能が正常に動 作しない、またモバイルコンソールが使用できない場合があります。
- 4)保護カバーは必ず装着した状態で使用してください。
- 5) コネクタタイプを使用される場合、感電や短絡防止のため、使用しない連結用電源端子には保護用シール(コネクタ:E3X-CNシリーズに付属)を貼ってください。





- 6)通信ユニット接続専用タイプを使用される場合、感電や短絡防止のため、使用しない連結用端子に は保護用キャップ(通信ユニット:E3X-ECT/CRTに付属)を付けてください。
- 7)通信ユニット接続専用タイプの連結を着脱するときは、連結部が斜めにならないようにしてください。 8)センサヘッドのコネクタを着脱するときや、アンブを着脱、増設するときは、必ず電源を切ってください。
- 9)電源遮断や静電気などのノイズにより書き込みエラーが発生(ERR/EEPが点滅表示)した場合、本 体の設定キーによる設定初期化処理を行ってください。 10)モバイルコンソールで操作する場合(通信ユニット接続専用タイプはモバイルコンソールが使用できません。)
- モバイルコンソール形E3X-MC11-SV2を使用してください。ただし、一部使用できない機能がありま す。形F3X-MC11は使用できません。
- 11)形E3X-DA-Nとは光通信できません。
- 12)電源投入直後は使用環境に応じて受光量が安定するまで時間がかかる場合があります。
- 13) 電源遮断時に出力パルスが発生する場合がありますので、負荷あるいは負荷ラインの電源を先行し
- て遮断してください。 14)清掃にはシンナー、ベンジン、アセトン、灯油類は使用しないでください
- 15)形E2C-EDAのセンサヘッドは使用できません。接続した場合、破損の可能性があります。

パッケージ内容の確認

・アンプユニット 1台 ・取扱説明書(本書) 1枚

タイプ		高機能ツイン出力タイプ		高機能外部入力タイプ		通信ユニット	
接続方式	t .	コード引き出しタイプ	コネクタタイプ*1	コード引き出しタイプ	コネクタタイプ*1	接続専用タイプ・	
形式 (E3C-)	NPN	LDA11	LDA6	LDA21	LDA7	LDA0	
1193C (LOC-)	PNP	LDA41	LDA8	LDA51	LDA9	_	
電源電圧	E		DC12~24\	/±10% リップル1	10%以下		
消費電力	h		消費電力10	80mW以下(24V)	寺45mA)		
制御出力	ь		オープンコ	コレクタ(DC26.4V)	以下)		
刊1年四/	'J		負荷電流:50	mA以下、残留電圧	::1V以下	_	
タイマ機能	能		OFF/オフディ	レイ/オンディレイ/	/ワンショット		
タイマ時間	胃	1ms~5s					
微分検出モ	-K	あり					
パワーチューニン	ノグ機能	あり					
相互工进程。	相互干渉防止機能		あり<光通信同期式>*2				
1日旦 1 /多 1	上作吃用它	10台					
入出力設	÷	出力設定(2CH)	出力/エリア出力	外部入力設定(名	・種ティーチング	出力設定(2CH出)	
人山刀政	止	/ 自己診	断出力)	/パワーチューニン	/グ/ゼロリセット	/エリア出力	
				/投光オフ/カ	ウンタリセット)	/自己診断出力)	
周囲温度		動作時:1~2台連	結時 / −25~55℃. 3	3~10台連結時 / −2!	5~50℃ 11~16台道		
		動作時:1~2台連結時/-25~55°C、3~10台連結時/-25~50°C、11~16台連結時/-25~45° 17~30台連結時(LDAOをE3X-ECTと連結する場合)/-25~40°C					
		「保存時:-30~70°C(ただし、氷結、結露しないこと)					
周囲湿度	ŧ		,	だし、結露しないこと	-)		
7-1 14/32/3					-/	10. 15011-	
振動		10~55Hz 複	振幅1.5mm X、Y	/、Z各方向 2h		10~150Hz 複振幅0.7mm	
1)以主//							

2.各部の名称とはたらき

②メインデジタル赤色表示 . (3)ツイン出力タイプ:動作表示灯(2CH側) 外部入力タイプ:パワーチューニング表示灯 | (4)サブデジタル緑色表示) ①動作表示灯(1CH)

⑤SET/RUN切替スイッチ

外部入力タイプ:動作モード切替スイッチ

① 1CHの出力がONしたときに点灯します。 ② 受光量や機能の名称を表示します。

- ③ ツイン出力タイプの場合、2CH側の出力がONしたときに点灯します。 外部入力タイプの場合、パワーチューニングを設定すると点灯します。
- ④ 検出時の補助的な情報や機能の設定値を表示します。
- モードの切替えを行います。
- ⑥ ツイン出力タイプの場合、表示や設定を行うチャンネルを選択します。
- 外部入力タイプの場合、入光時にONするか遮光時にONするかを選びます。
- ⑦ 表示の切替えや機能の設定操作を行います。

3. 操作の基礎知識

■モードの切替え

モードの切替えは「SET/RUN切替スイッチ」で行います。

目的にあったモードに切替えて操作してください。

モード	内容
SET	検出条件やティーチングによりしきい値を設定するときに選びます。
RUN	実際に検出を行うときや以下の設定を行うときに選びます。 しさい値マニュアル調整、ティーチング、パワーチューニング、ゼロリセット、 キーロック

■ キー操作

表示の切替えや検出条件の設定操作は、操作キーで行います。

キーの役割は、現在選んでいるモードによって変わります。

h ottar	キーのはたらき			
キーの種類	RUNモード	SET₹-ド		
UP*-	しきい値を上げます。	設定内容によってはたらきが変わります。 ・ティーチングを実行 ・設定値の変更(順方向)		
DOWN+-	しきい値を下げます。	設定内容によってはたらきが変わります。 ・ティーチングを実行 ・設定値の変更(逆方向)		
MODE*-	「MODEキー設定」によってはたらきが 変わります。 ・ティーチング ・パワーチューニング実行 ・ゼロリセット実行	設定したい機能の表示を切り替えます。		

■ 表示の見方

メインデジタルとサブデジタルに表示される内容は、現在選んでいるモードによって異なり ます。工場出荷後、初めて電源を入れるとRUNモードの内容が表示されます。

. ,	0 20-	112(13) (12) (11)	1 17/11/20 2031 6 11 61 7 6	
	モード メインデジタル(赤色表示)		サブデジタル(緑色表示)	
	順番に表示します。		キー操作によってしきい値やシオンデジタルに 表示している機能の設定値を順番に表示します。 ・「検出機能」に「DIFF」(微分動作)を設定してい る場合は受光量変化に対するしきい値を表示します。	
	RUN*	現在の受光量を表示します。「検出機能」に [DIFF] (微分動作) を設定している場合は受光変化量を表示します。	現在のしきい値を表示します。「検出機能」に「DIFF」(微分動作)を設定している場合は受光量変化に対するしきい値を表示します。	

※表示内容は「表示切替」機能で変更することができます。「5.詳細設定」参照

4.基本設定

1. 動作モードを設定する

入光時にONするか遮光時にONするかを選びます。

SETモードの「動作モード」で設定します。「5.詳細設定」参照

選択肢	内容
LON (ライトオン) (工場出荷時)	入光時に出力がONします。「検出機能」に [DIFF](微分動作)を設定している場合はエッジ検出時出力がONします。
DON (ダークオン)	遮光時に出力がONします。「検出機能」に [DIFF] (微分動作) を設定してい る場合はエッジ検出時出力がOFFします。

2. パワーを調整する(必要に応じて)


現在検出中の受光量を「パワーチューニング目標値(2000:工場出荷時設定)」近くに調整 たいときに行う操作です。パワーチューニングは必ず検出物体とヘッドを固定して、受光 量が安定している状態で実行してください。


■設定方法

max 50m/s²まで)

あらかじめ、「MODEキー設定」機能の設定が [PTUN] (パワーチューニング) ていることを確認してください

工場出荷時は、 [PTUN] が設定されています。 「5.詳細設定」参照

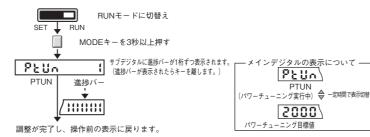


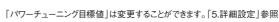




検出機能を切り替えると、受光量が変化することがありますので、その場合は 検出機能切り替え後に再度パワーチューニングを実行してください。

進捗バー表示後、以下の内容が表示された場合は、エラーが発生しています。

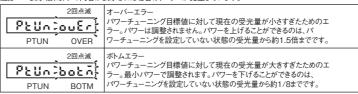

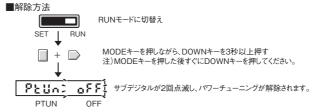

3. しきい値を設定する


1)マニュアル設定 しきい値を手動で設定します。



2)ティーチング設定


①ワークありなしティーチング

ワークありとワークなしの2 点をそれぞれ検出し、その中間値の光量をしきい値として設定します。RUNモード、SETモ ードいずれのモードでも設定できます。 RUNモードにて設定する場合、あらかじめ、「MODEキー設定」機能の設定が[2PNT]になっていることを確認してく

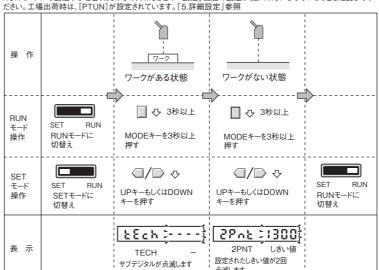


点滅します 「検出機能」に[DIFF] (微分動作)を設定している場合、ワークありとワークなしの2点の 受光量の差の半分の値をしきい値とします。

②オートマティックティーチング(移動ワークにて設定) キーを押し続けている間び受光量を検出して、その最大値と最小値の中間をしきい値として設定できます。 あらかじめ、「MODEキー設定」機能の設定が「AUTO」になっていることを確認してください。工場出荷時は、[PTUN]が設定されています。「5.詳細設定」参照

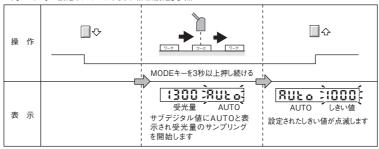

「検出機能」に[DIFF] (微分動作)が選択されている場合、オートマティックティーチング

③透過形(回帰反射形)ワークなしティーチング 透過形または回帰反射形センサヘッド用の設定方法でワークがない状態にて行います。 (ワークなし状態)受光量の約-6%の値をしきい値として設定します。微妙な光量差を安定して検出で

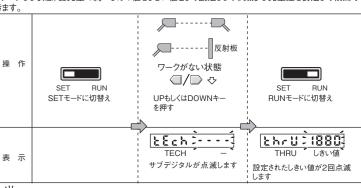


「検出機能」に[DIFF](微分動作)を設定している場合、(ワークなし状態の) 受光量の下側で安定して検出できる最小の位置にしきい値が設定されます。

④反射形ワークなしティーチング

反射形センサヘッド用の設定方法でワークがない(背景)状態にて行います。

(ワークなし状態)受光量の約+6%の値をしきい値として設定します。微妙な光量差を安定して検出で きます。

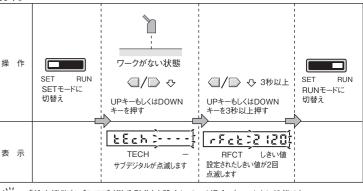


「検出機能」に[DIFF] (微分動作)を設定している場合、(ワークなし状態の) 受光量の上側で安定して検出できる最小の位置にしきい値が設定されます。

・ティーチングエラー

ティーチングを実行後、サブデジタル表示に下記が表示された場合はエラーが発生しています。ただし、しきい値は可能 な範囲にて設定されますが、正しく検出できない場合があります。




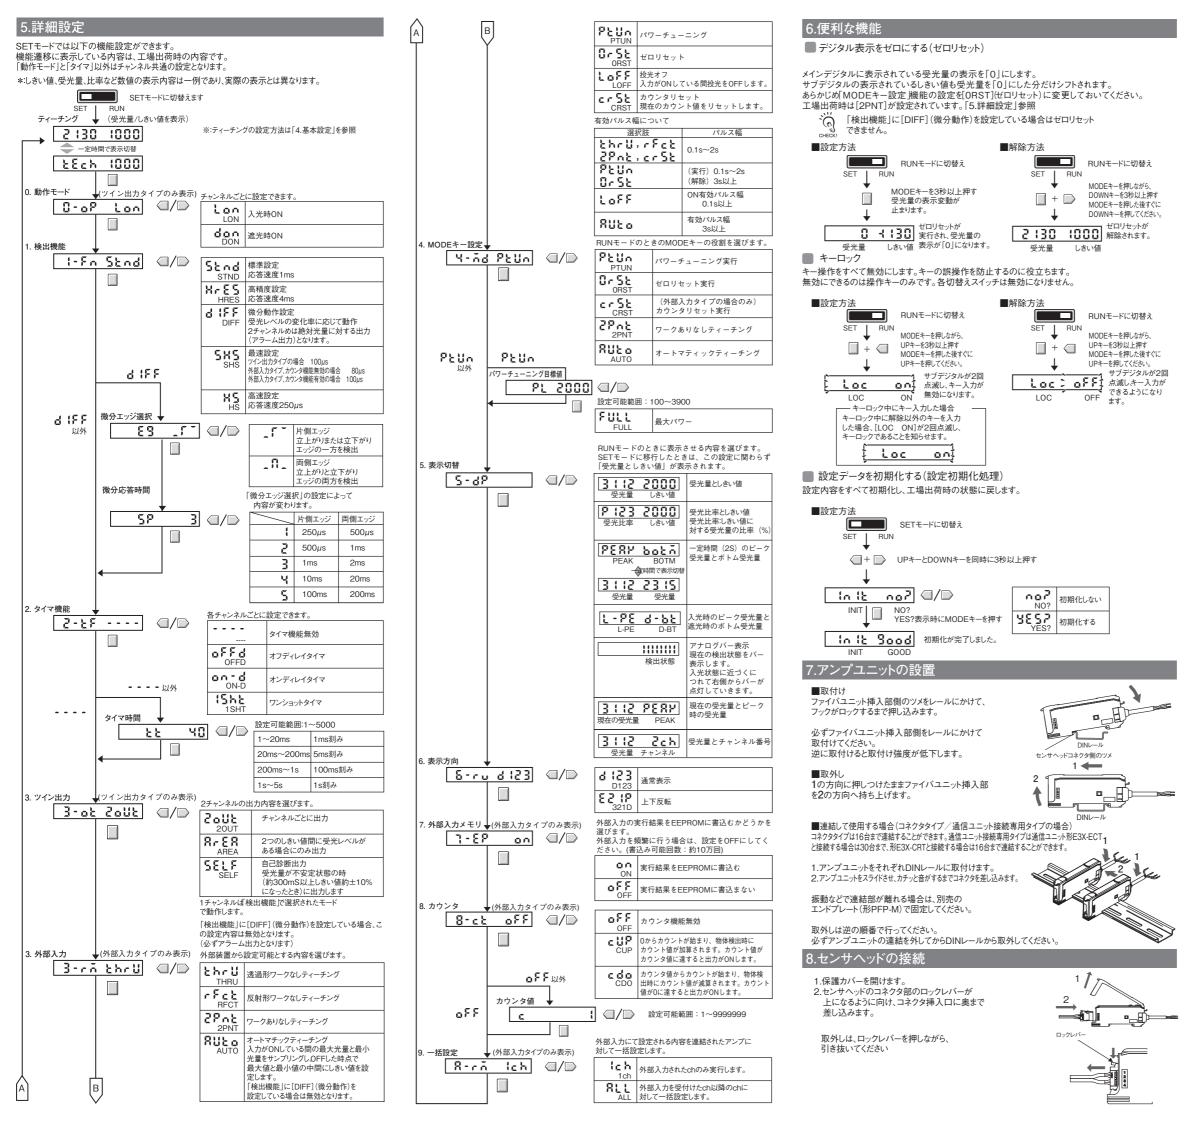

9.入出力段回路図

■形E3C-LDA11、形E3C-LDA6(NPNタイプ)

■形E3C-LDA41、形E3C-LDA8(PNPタイプ)

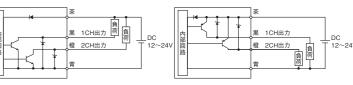

■形E3C-LDA21、形E3C-LDA7(NPNタイプ)

■形E3C-LDA51、形E3C-LDA9(PNPタイプ)

*


de 分部入力


*形E3C-LDA0は通信ユニット接続専用タイプです。

10.外形寸法図

(通信ユニット接続専用タイプ)

(単位:mm)

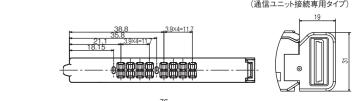

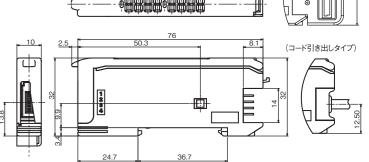

ご使用に際してのご承諾事項

- ①安全を確保する目的で直接的または間接的に人体を検出する用途に、本製品を使用しないでください。同用途には、当社センサカタログに掲載している安全センサをご使用ください。
- ②下記用途に使用される場合、当社営業担当者までご相談のうえ仕様書などによりご確認いただくとともに、定格・性能に対し余裕を持った使い方や、万一故障があっても危険を最小にする安全回路などの安全対策を講じてください。
- a)屋外の用途、潜在的な化学的汚染あるいは電気的妨害を被る用途 またはカタログ、取扱説明書等に記載のない条件や環境での使用
- またはカタロク、取扱説明書等に記載のない条件や環境での使用 b)原子力制御設備、焼却設備、鉄道・航空・車両設備、医用機械、娯楽機械、 安全装置、および行政機関や個別業界の規制に従う設備
- c)人命や財産に危険が及びうるシステム・機械・装置
- d)ガス、水道、電気の供給システムや24時間連続運転システムなどの 高い信頼性が必要な設備
- e)その他、上記 a) ~ d) に準ずる、高度な安全性が必要とされる用途
- *上記は適合用途の条件の一部です。当社のベスト、総合カタログ・データシート等最新版のカタログ、マニュアルに記載の保証・免責事項の内容をよく読んでご使用ください。



または貴社担当オムロン営業員にご相談ください。 A(9) 2009年10月



Power supply connector

Photoelectric Sensors with Separate Digital AmplifiersLaser-type Amplifier Units

E3C-LDA Series

INSTRUCTION SHEET

Thank you for selecting an OMRON product. This sheet primarily describes precautions required in installing and operating the product.

The specialist who has the knowledge of electricity must treat.
Please often read this manual, and use it correctly after it understands enough.

• Please keep this manual importantly to refer at any time.

TRACEABILITY INFORMATION:

Representative in EU: Omron Europe B.V. Wegalaan 67-69 2132 JD Hoofddorp, The Netherlands Omron Corporation, Shiokoji Horikawa, Shimogyo-ku, Kyoto 600-8530 JAPAN Ayabe Factory 3-2 Narutani, Nakayama-cho, Ayabe-shi, Kyoto 623-0105 JAPAN

The following notice applies only to products that carry the CE mark:

This is a class A product. In residential areas it may cause radio interference, in which case the use may be required to take adequate measures to reduce interference.

© OMRON Corporation 2005 All Rights Reserved.

PRECAUTIONS FOR SAFE USE

Please observe the following precautions for safe use of the product.

1)Do not use the Amplifier Unit in environments subject to flammable or explosive gases.
 2)Do not use the Amplifier Unit in environments subject to exposure to water, oil, chemicals, etc.

3)Do not attempt to disassemble, repair, or modify the Amplifier Unit in any way. 4)Do not apply voltages or currents that exceed the rated ranges.

5) Wire the Amplifier Unit correctly, e.g., do not reverse the polarity of the power supply

6)Connect the load correctly.

7)Do not short both ends of the load.

8)Do not use the Amplifier Unit if the case is damaged.

9)When disposing of the Amplifier Unit, treat it as industrial waste.

PRECAUSIONS FOR CORRECT USE

Please observe the following precautions to prevent failure to operate, malfunction, or undesiable effects on product performance

- 1) Wire the Amplifier Unit separately from power supply or high-voltage lines. If the Amplifier Unit wiring is wired together with or placed in the same duct as high-power lines, inductive noise may cause op-erating errors or damage the Amplifier Unit.
- 2) Do not extend the cable to more than 100 m, and use a wire size of 0.3 mm2 or larger for the exten-sion cable.
- 3) The Amplifier Unit is ready to operate 200 ms after the power supply is turned ON. If the Amplifier Unit and load are connected to power supplies separately, turn ON the power supply to the Amplifier Unit first.

Please turn on the power supply at the same time when you connecting use the Amplifier units with cables. Mutual interference prevention might not operate normally or mobile console might not be able to be used when the difference between connected Amplifiers at the power supply turning on times is 30ms or more.

4) Always keep the protective cover in place when using the Amplifier Unit.

- 5) When using a connector model, place a protective label (provided with the E3X-CN series connectors) on the power supply connecting terminals that are not used, to prevent electric shock or short circuit. 6) When using a communication unit connection model, place a protective cap (provided with the E3X-ECT/CRT communication unit) on the connecting
- terminals that are not used, to prevent electric shock or short circuit. 7) When connecting or removing the communication unit connection model.
- make sure that the connecting part is not slanted.
- 8) Always turn OFF the power supply before connecting or disconnecting Sensor Heads, joining or sep-arating Amplifier Units, or adding Amplifier Units.

 9) If the data is not written to the EEPROM correctly due to a power failure or
- static-electric noise, initi-alize the settings using the keys on the Amplifier Unit.
- 10) Using a Mobile ConsoleUse (The communication unit connection model cannot use a mobile console.)

Use the E3X-MC11-SV2 Mobile Console for the E3C-LDA series Amplifier Connecting Terminal
Units. However, there is a function which cannot be used in part. Other Mobile Consoles, such as the E3X-MC11, cannot be used

11) Optical communications are not possible with an E3X-DA-N Amplifier Unit.

12) Depending on the application environment, time may be required for the incident light level to stabi-lize after the power supply is turned ON. 13) Output pulses may occur when the power is interrupted and so turn OFF the power to the load or load line before turning OFF the power to the Sensor.

14) Do not use thinners, benzine, acetone, or kerosene for cleaning the Amplifier Unit.

15) The Sensor Head of E2C-EDA cannot be used. It may damage, if it connects.

Confirming the Package Contents


s an	d Specific	ations			
		1. Ratings and Specifications			
	Advanced, twin-output models		Advanced, exter	nal-input models	Communication unit
ethod	Prewired	Separate connector*1	Prewired	Separate connector*1	connection model *3
NPN	E3C-LDA11	E3C-LDA6	E3C-LDA21	E3C-LDA7	E3C-LDA0
PNP	E3C-LDA41	E3C-LDA8	E3C-LDA51	E3C-LDA9	_
age					
nption		1,080 mW	max. (45 mA ma	x. at 24 V)	
nut		Open c	ollector (26.4 VDC	c max.);	_
put					
		OFF, OFF-		or one-shot	
ie					
n mode					
ing	Supported				
ence	Supported (optical communications sync method)				
*	10				
					Output setting
;					(2CH output)/area output
	area output, or self-diagnosis output) zero reset, light OFF, or counter reset)			/self-diagnosis output)	
Ambient temperature Operating: Groups of 1 to 2 Amplifiers: -25°C to 55°C Groups of 3 to 10 Amplifiers: -25°C to 50°C Groups of 11 to 16 Amplifiers: -25°C to 40°C Groups of 17 to 30 Amplifiers: -25°C to 40°C Storage: -30°C to 70°C (with no icing or condensation)					
nidity	Operating and storage: 35% to 85% (with no condensation)			ion)	
Vibration each in X, Y and Z directions 0.7 mm amplitum minutes Y and Z (up to 5)		10 to 150 Hz with a 0.7 mm double amplitude for 80 minutes each in X, Y and Z directions (up to 50 m/s²)			
	age approximately approximatel	PNP E3C-LDA41 age aption pput see mode innode inno	PNP E3C-LDA41 E3C-LDA8 age 12 to 24 Vi nption 1,080 mW Open or load current: 50 OFF, OFF- or mode in	PNP E3C-LDA41 E3C-LDA8 E3C-LDA51 age 12 to 24 VDC ±10%, ripple 1,080 mW max. (45 mA max) put Open collector (26.4 VDC load current: 50 mA max; residual v OFF, OFF-delay, ON-delay, v ee 1 mode Supported supported supported supported Supported (optical communicatio communicatio supported (channel 2 output, area output, or self-diagnosis output) Porature Operating: Groups of 1 to 2 Amplifiers: -25°C to 55°C Groups of 3 to 10 Amplifiers: -25°C to 50°C Groups of Groups of 17 to 30 Amplifiers: -25°C to 50°C Groups of Groups of 17 to 30 Amplifiers: -25°C to 50°C	PNP E3C-LDA41 E3C-LDA8 E3C-LDA51 E3C-LDA9 age 12 to 24 VDC ±10%, ripple (p-p) 10% max. 1,080 mW max. (45 mA max. at 24 V) Open collector (26.4 VDC max.); load current: 50 mA max; residual voltage: 1 V max. OFF, OFF-delay, ON-delay, or one-shot 1 ms to 5 s supported Supported Supported Supported Supported Output setting (leaching method, power funing, area output, or self-diagnosis output) erature Operating: Groups of 1 to 2 Amplifiers: -25°C to 55°C Groups of 3 to 10 Amplifiers: -25°C to 50°C Groups of 11 to 16 Amplifiers: Groups of 3 to 0 Amplifiers: -25°C to 40°C Storage: -30°C to 70°C (with no icing or condensation) Operating and storage: 35% to 85% (with no condensation)

3X-CN22 Slave Connector (2-conductor). Either Connector can be used.

unications are disabled if SHS is selected for the detection mode, and the communications functions for mutual interference into and the Mobile Console will not function.

nnectable communication units are E3X-ECT (30 units max.) and E3X-CRT (16 units max.). For details on names of each part and tings, refer to items of the twin output model.

2. Nomenclature

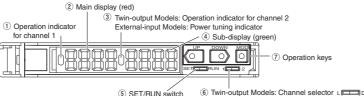

External-input Models: Operation mode selector ① Lit when the output is ON. Twin-output Models: Lit when the output for channel 1 is ON.

Displays the incident light level or the function name.

Twin-output Models: Lit when the output for channel 2 is ON.

External-input Models: Lit when power tuning is set. Displays supplemental detection information, the setting of a function, etc.

Used to switch the mode.

- (6) Twin-output Models: Used to select the channel to display or set. External-input Models: Used to select dark-ON or light-ON operation
- ① Used to change the display, set functions, etc.

3. Basic Operating Information

Setting the Mode

The mode is set using the SET/RUN switch. Set this switch according to the operation to be performed.

Mode	Description
SET	Select to set detection conditions, to teach the threshold value, etc.
RUN	Select for actual detection operation or to set the following: Manual adjustment of threshold value, teaching power adjustment, zero reset, or key lock.

Key Operations

The operation keys are used to switch the displays and set detection conditions. The functions of the keys depend on the current mode

V	Function			
Key	RUN mode	SET mode		
UP key	Increases the threshold or threshold value.	Depends on the setting. • Executes teaching. • Changes the setting forward.		
DOWN key	Decreases the threshold or threshold value.	Depends on the setting. • Executes teaching. • Changes the setting in reverse.		
MODE key	Depends on the MODE key setting. • Teaching • Executes power tuning. • Executes a zero reset.	Switches the function to be set on the display.		

If a specific time for pressing a key is not given in a procedure, press the key for approximately 1 second. For example, if the procedure says ipress the UP key, if then press the UP key for approximately 1 second.

Reading Displays

The information displayed on the main display and sub-display depends on the current mode. For the default settings, the RUN mode displays will appear when the power supply is turned ON for the first time.

Mode	Main display (red)	Sub-display (green)	
SET	Displays the incident light level," function name, or other information depending on the key operation. "The incident light level will be displayed even if DIFF (differential operation) is set for the detection method.	Displays threshold value* or the setting of the function displayed on the main display depending on the key operation. *The threshold value for the change in the incident light level will be displayed if DIFF (differential operation) is set for the detection method. For the default setting, the current threshold value will be displayed.	
RUN (See note.)	The current incident light level will be displayed. The change in the incident light level will be displayed when DIFF (differential operation) is set for the detection mode.	The current threshold value will be displayed. The threshold value for the change in the incident light level will be displayed if DIFF (differential operation) is set for the detection method.	

Note: The information that appears on the displays can be set using the display switch function. Refer to 5. Detailed Settings.

4. Basic Settings

1. Setting the Operation Mode

Select either light-ON or dark-ON operation. Set as the operation mode in SET mode. Refer to 5. Detailed Settings


	Selection	Description
(default) If DIFF (differential operation) is set for the		The output will turn ON when the incident light level is above the threshold. If DIFF (differential operation) is set for the detection method, the output will turn ON when an edge is detected.
	DON (dark-ON)	The output will turn ON when the incident light level is below the threshold. If DIFF (differential operation) is set for the detection method, the output will turn OFF whose an order is detected.

2. Adjusting the Power (as Required)

Power tuning can be used to adjust the incident light level that is currently being received to the power tuning target value (default: 2,000). Before tuning ON the power, always secure the detection object and Head and be sure that the incident light level is stable.

■ Setting Method

Confirm that the MODE key setting is PTUN (power tuning) in advance. PTUN is the default setting. Refer to 5. Detailed Settings.

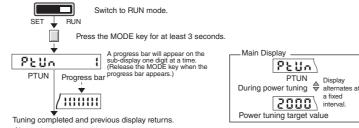


The power tuning target value can be changed. Refer to 5. Detailed Settings

The incident light level may change when the detection method is changed. If necessary, retune the power after changing the detection method.

●Power tuning Errors

An error has occurred if one of the following displays appears after the progress bar is displayed

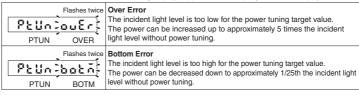


■ Clearing Method



3. Setting Thresholds


1)Manually Setting

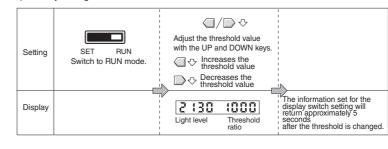

2) Teaching

1) Teaching With and Without a Workpiece


Teaching can be performed twice, once with and once without a workpiece, and the value between the two measured values is set as the threshold. RUN mode and SET mode - each mode can be set up. PTUN is the default setting. Refer to 5. Detailed Settings.

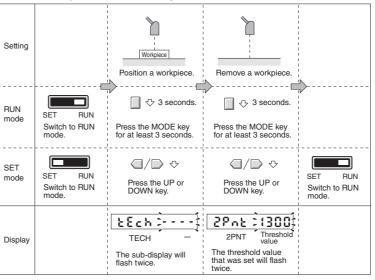

If DIFF (differential operation) is set for the detection method, the threshold value will be set to half of the difference between the two measured values.

②Automatic-teaching(It sets up at move work.)


While continuing pushing a key, the middle of the detected maximum and the minimum

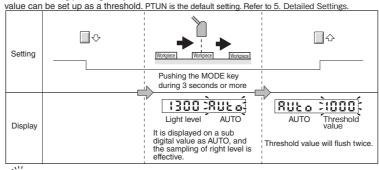

This method cannot be used to set the threshold when the detection method has been set to DIFF (differential operation)

3 Teaching for Through-beam or Retroflective Sensor Heads


Teaching for a Through-beam or Retroflective Sensor Head is performed without a workpiece. A value about 6% less than the incident light level with no workpiece is set as the threshold value. This method is ideal to stably detect very small differences in light level.

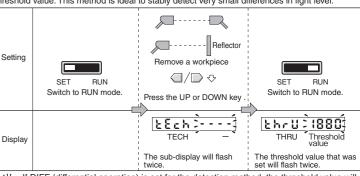

If DIFF (differential operation) is set for the detection metion, the union be set to the minimum value below the incident light level without a workpiece that If DIFF (differential operation) is set for the detection method, the threshold value will

4 Teaching for Reflective Sensor Heads

Teaching for a Reflective Sensor Head is performed without a workpiece (i.e., for the background). A value about 6% greater than the incident light level is set as the threshold value. This method is ideal to stably detect very small differences in light level.

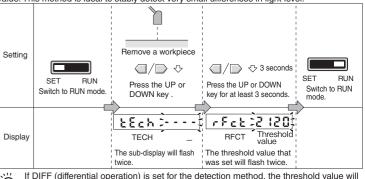

be set to the minimum value above the incident light level without a workpiece that will enable stable detection

Teaching Error

After performing teaching, when the following is displayed on sub digital display, the error has occurred.

flash twice.	Over error	Light level is too large. Do one of the following and then repeat the operation. • Adjust the Head to decrease the incident light level. • Execute power tuning.
flash twice.	Low error	Light level is too small. Do one of the following and then repeat the operation. • Adjust the Head to increase the incident light level. • Execute power tuning.
flash twice.	Near error	The difference of incident light level is too small. Do one of the following and then repeat the operation. • Adjust the Head to increase the difference between the two incidentlight levels.

5. Detailed Settings The following functions can be set in SET mode. The default settings are shown in the transition boxes between functions. All settings except for the operation mode and timer settings are the same for both channels. *: The values shown for thresholds, incident light levels, percentages, etc., are examples only. Actual displays may vary. Switch to SET mode SET RUN (Light level/Threshold display) 2 (30 (000 Note: Refer to 4. Basic Settings for teaching methods. A display is changed in fixed time. £8ch 1000 Set separately for each channe 0. Operation (Twin-output Models Only) Light-ON Lon 0-op Dark-ON DON Standard mode 1-Fn Stnd Response Time:1ms XAES High-resolution mode Response Time:4ms Differential operation mode d IFF Operation is according to the change in the incident light level. The output for channel 2 is always an alarm output for the absolute light level Super-high-speed mode Twin-output Models: 100 ms SHS SHS d 188 Counter disabled for External-input Models: 80 ms Counter enabled for External-input Models: 100 ms X5 High-speed mode Differential esponse time:250ms Edge Selection d IFF 89 Single edge Differential Response Time 3 @/> 9.0 250 ms 2 500 ms 3 1 ms 4 10 ms

Fither the rising or falling edge is detected Double edge Both the rising and falling edge are detected. This setting depends on the setting for he differential edge selection. Single edge Double edge 500 ms 1 ms 2 ms 20 ms 100 ms 200 ms Set separately for each channel. 2-25 ----| Timer disabled oFFd OFFD OFF-delay timer on-d ON-delay timer

15ht

5-ms increments 20 to 200 ms 200 ms to 1 s 100-ms increments 1 to 5 s 1-s increments 3. Twin Outputs (Twin-output Models Only) The function of the output for channel 2 can be selected. 3-02 2082 🗆/🗅 3005 8758 Output if level is between the two thresholds.

48

Timer Time

В

눈눈

SELF SELF Self-diagnosis output
Output when the incident light level
is not stable, i.e., when the light level is
±10% of the threshold value for 300 ms or longer. The output for channel 1 functions according to the detection mode selection. This setting is not value if DIFF (differential operation)

One-shot time

1 to 20 ms


Setting range: 1 to 5,000

1-ms increments

is set for the detection method. (The output for channel 2 is always an alarm output for differential operation.) 3. External The item that is controlled by the input from an external device External-input Models Only

3-rā bhru thru Through-beam, no-workpiece teaching THRU r F c b Reflective, no-workpiece teaching 2006 With/Without workpiece teaching AUTO

Automatic teaching
The maximum and minimum light
levels are sampled while the input is
ON and, when the input turns OFF, the
average of these values is set as the
threshold value. threshold value.
Disabled if the detection function is set to "DIFF" (differential operation).

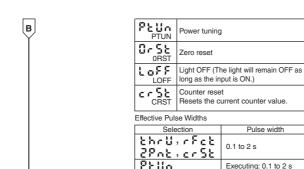

PեUn Executing: 0.1 to 2 s Clearing: 3 s or longe <u> OrSt</u> Effective ON pulse LOFF width: 0.1 s mir Effective pulse width: 3 s RUEo The function of the MODE key in RUN mode can be selected

PtUn PTUN Y-⊼d PŁU∧ □/□ Tunes the power. 0,55 Executes a zero reset (For the E3X-DA RM-S Only) c - 52 esets the counter 2275 Teaching With and Without a Workpiece AUto Automatic-teaching PեWո

Setting range: 100 to 3,900 FULL Maximum power FULL Display The information displayed in RUN mode can be selected When going to SET mode, this setting will be ignored and the incident light level and threshold value will be displayed

 \Box/\Box

PL 2000 @/D

MODE Key

թեԱր

5-68

6. Display

. External Input

9-50

[8-ru d:23] □/□

٥٨

Light level Threshold	The incident light level and threshold value
% light level Threshold	The incident light level as a percentage of the threshold value and the threshold value.
PEAK BOTM PEAK BOTM Alternates at a fixed interval	The peak incident level and bottom incident level

of fixed time(2s). 3112 2315 L-PE d-bt The incidient light peak level and no incident light bottom level. Analog bar display. The is displayed as an analog bar. The bar will lengthen from the right

		do orr siatao io roasiro
3 1 12 Light level	PERY	The current incident light level and the pea incident light level.
3 1 12 Light level	Zch Channel	The incident light level and the channel.

d 123 D123 Normal display E 2 1P 321D Reversed display

Whether external input execution results are written to EEPROM can be selected. Disable this function if the external input is turned ON frequently. (The write life is approximately 100,000 writes.) (External-input Models Only)

Write results to EEPROM. Do not write results to EEPROM. External-input Models Only oFF Disables counter. off @/D 8-65

The count is incremented from 0 each time an object is detected, and the output is turned ON when the count reaches the specified count value. The count is decremented from the Not off specified count value each time an object is detected, and the output is turned ON when the count reaches 0. Counter Value ٩٤٥ Setting range: 1 to 9,999,999 | c

A package setting is carried out to the amplifier with which (External-input Models Only) the contents set up in an external input were conr Ch Only ch by which the external input ich @/D 8--5 was carried out is performed. A package setting is carried out to ch after ch which received the

external input.


6. Convenient Functions

Zeroing the Main Display

The incident light level displayed on the main display can be zeroed. The threshold displayed in the sub-display is shifted by an amount corresponding to the amount the incident light level was


Confirm that the MODE key setting is ORST (zero reset) in advance. PTUN (power tuning) is the default setting. Refer to 5. Detailed Settings

Zero-reset is not possible if the detection function is set to "DIFF" (differential operation).

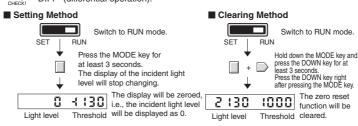


Kev Lock

All key operations can be disabled to help prevent key operating errors. Only the operation keys are disabled. The switches and selectors will still function.

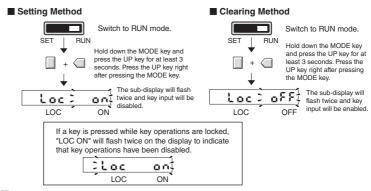

Initializing Settings

This procedure can be used to return all the settings to the original default values. ■ Setting Method

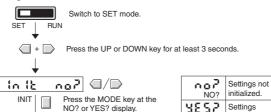

Initialization has been completed. GOOD

7. Installing the Amplifier Unit

■ Mounting Units

Catch the hook on the Fiber Unit connector end of the Unit on the DIN Track and then press down on the other end of the Unit until it locks into place.

Always attach the Fiber Unit connector end first. If the incorrect end is attached first, the mounting strenath will be reduced.

■ Removing Units

Press the Unit in the direction indicated by "1" and then lift up on the Fiber Unit connector end of the Unit in the direction indicated by "2."

■ Mounting Amplifier Units in Group

(Connector Type Models/Communication Unit Connection Type Models) Up to 16 connector type models can be connected. Up to 30 communication unit connection

type models can be connected to the communication unit E3X-ECT, or 16 units to the E3X-CRT. 1. Mount the Amplifier Units one at a time onto the DIN Track.


2. Slide the Amplifier Units together and press the Amplifier Units together until they click into place. Secure the Units with an End Plate (PFP-M) if there is a

Reverse the above procedure to separate and remove the Units Do not attempt to remove Amplifier Units from the DIN Track without separating them first.

possibility of the Amplifier Units moving, e.g., due to vibration.

8. Connecting Sensor Heads

- 1. Open the protective cover
- 2. Press up the lock button.
- 3. Insert the fibers all the way to the back of the connector insertion opening. 4. Return the lock button to its original
- position to secure the fibers. Reverse the above procedure to disconnect the Fiber Unit.

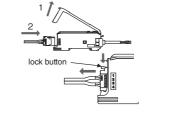


DIN Track

Hook on the Fiber Unit connector end

1 🗲


9. I/O Circuits

■ E3C-LDA11 and E3C-LDA6 (NPN Models) ■ E3C-LDA41 and E3C-LDA8 (PNP Models)

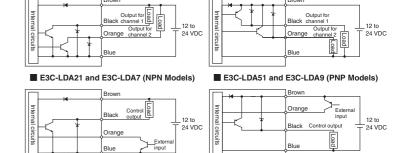

*The E3C-LDA0 is a communication unit connection model.

10. Dimensions

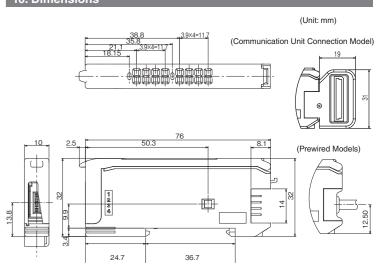

Suitability for Use

THE PRODUCTS CONTAINED IN THIS SHEET ARE NOT SAFETY RATED. THEY ARE NOT DESIGNED OR RATED FOR ENSURING SAFETY OF PERSONS, AND SHOULD NOT BE RELIED UPON AS A SAFETY COMPONENT OR PROTECTIVE DEVICE FOR SUCH PURPOSES. Please refer to separate catalogs for OMRON's safety rated products.

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of the products in the customer's application or use of the product.

Take all necessary steps to determine the suitability of the product for the systems, machines, and equipment with which it will be used. Know and observe all prohibitions of use applicable to this product

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS. AND THAT THE OMRON PRODUCT IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

See also Product catalog for Warranty and Limitation of Liability.

