

Before Using Single-beam Sensor ST4-A□

MJE-ST4A No.0034-26V

Thank you very much for purchasing Panasonic products.
Please read this Instruction Manual carefully and thoroughly for the correct and optimum use of this product.
Kindly keep this manual in a convenient place for quick reference.

CAUTION

- The single-beam sensor **ST4-A□** cannot be used by itself. Make sure to use **ST4-A□** with an exclusive controller (controller **ST4-C11** or multifunctional controller **ST4-C12EX**).
- For details of the single-beam sensor **ST4-A□**, refer to an instruction manual enclosed with the exclusive controllers.

Panasonic Industrial Devices SUNX Co., Ltd.

<http://panasonic.net/id/pidsx/global>

Overseas Sales Division (Head Office)

2431-1 Ushiyama-cho, Kasugai-shi, Aichi, 486-0901, Japan

Phone: +81-568-33-7861 FAX: +81-568-33-8591

About our sale network, please visit our website.