

Autonics INTELLIGENT DISPLAY UNIT (Serial Input) DS/DA-S Series INSTRUCTION MANUAL



Thank you for choosing our Autonics products. Please read the following safety considerations before use.

Safety Considerations

- Please observe all safety considerations for safe and proper product operation to avoid hazards.
- Safety considerations are categorized as follows.
 - Warning** Failure to follow these instructions may result in serious injury or death.
 - Caution** Failure to follow these instructions may result in personal injury or product damage.
- The symbols used on the product and instruction manual represent the following
 - symbol represents caution due to special circumstances in which hazards may occur.

Warning

- Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.) Failure to follow this instruction may result in fire, personal injury, or economic loss.
- Install on a device panel to use. Failure to follow this instruction may result in fire.
- Do not connect, repair, or inspect the unit while connected to a power source. Failure to follow this instruction may result in fire.
- Check 'Unit description and function setting' before wiring. Failure to follow this instruction may result in fire.
- Do not disassemble or modify the unit. Failure to follow this instruction may result in fire.



Caution

- Use the unit within the rated specifications. Failure to follow this instruction may result in fire or product damage.
- Use dry cloth to clean the unit, and do not use water or organic solvent. Failure to follow this instruction may result in fire.
- Do not use the unit in the place where flammable/explosive/corrosive gas, humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present. Failure to follow this instruction may result in fire or explosion.
- Keep metal chip, dust, and wire residue from flowing into the unit. Failure to follow this instruction may result in fire or product damage.

Model

1) Basic unit			2) Expansion unit		
Model	Display method	Size	Model	Display method	Size
DS16-S	7 Segment	W16×H24mm	DA22-S	16 Segment	W20×H33mm
DS22-S		W20×H33mm	DA40-S		W40×H60mm
DS40-S		W40×H60mm	DA60-S		W60×H96mm
DS60-S		W60×H96mm			

Connection of Units

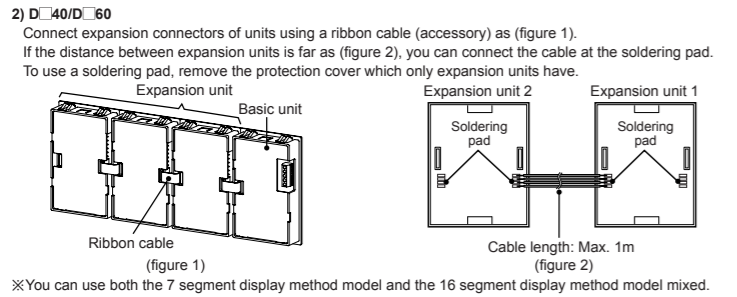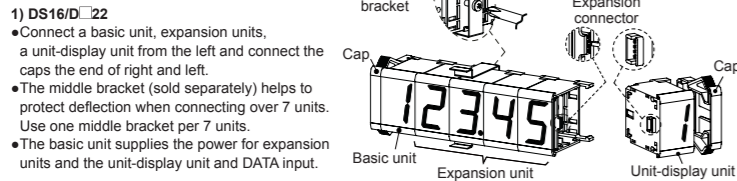

Remove of Protection Cover



To operate the function set switch of the D40, D60 models, you should remove the protection cover. Press the connection parts (4 points) of the protection cover at the top/bottom of the product with a flat-head screwdriver and the protection cover is removed.
Caution: Before removing the protection cover, power must be turned OFF.
 The above specifications are subject to change and some models may be discontinued without notice.
 Be sure to follow cautions written in the instruction manual and the technical descriptions (catalog, homepage).

Specifications


Model	Basic unit	DS16-S	D22-S	D40-S	D60-S
Expansion unit		DS16-E	D22-E	D40-E	D60-E
Input method	Serial				
Display color	Red, Green (selectable by model)				
Power supply	12-24VDC				
Allowable voltage range	90 to 110% of rated voltage				
Current consumption	Red type	Max. 20mA	Max. 25mA	Max. 55mA	Max. 65mA
	Green type	Max. 15mA	Max. 20mA	Max. 40mA	Max. 45mA
Character size		W9×H16mm	W11.2×H22.5mm	W22.4×H40mm	W33.6×H60mm
Max. clock	Max. 2KHz				
Input logic	Selectable Positive logic (PNP), Negative logic (NPN) (change by function set switch)				
Input resistance	20kΩ				
Input level	High: 4.5-24VDC, Low: 0-1.2VDC				
Display character	Displays 64 types of character and sign (0 to 9, A to Z, 27 signs, dot)				
The number of max. multi-stage connection	24 units				
Noise resistance	±500V the square wave noise (pulse width: 1μs) by the noise simulator				
Environment	Ambient temp.	-10 to 55°C, storage: -25 to 65°C			
	Ambient humi.	35 to 85%RH, storage: 35 to 85%RH			
Accessory	Basic unit	Right/Left cap: 1	Right/Left cap: 1	—	
	Expansion unit	—		Ribbon cable (50mm) : 1	
Protection structure	IP40 (front part)				
Approval	CE				
Weight	Basic unit	Approx. 52g (approx. 12g)	Approx. 58g (approx. 17g)	Approx. 63g (approx. 28g)	Approx. 110g (approx. 60g)
	Expansion unit	Approx. 77g (approx. 12g)*3	Approx. 92g (approx. 17g)*3	Approx. 63g (approx. 28g)	Approx. 110g (approx. 60g)

※1: Max. Clock is for 1:1 of duty ratio (ON, OFF ratio).
 ※2: The weight includes packaging. The weight in parentheses is for unit only.
 ※3: This is 3 units' weight as packaging unit and the weight in parentheses is only unit weight.
 ※Environment resistance is rated at no freezing or condensation.

Dimensions

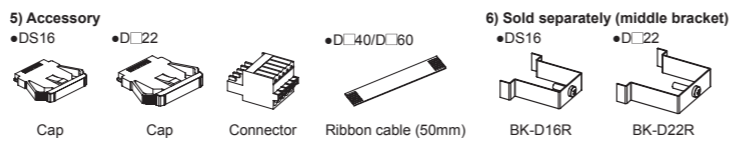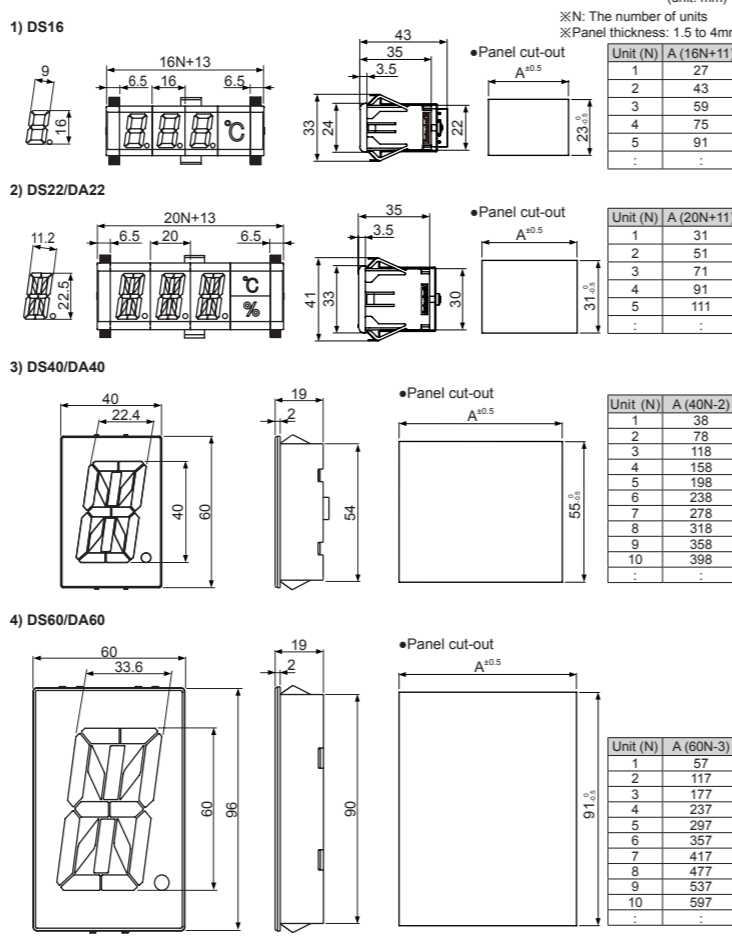

Input Circuit

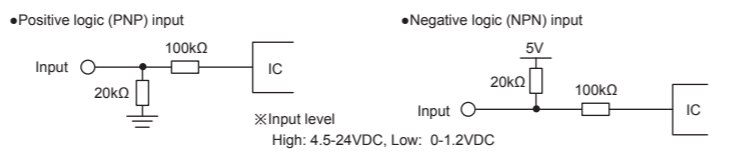

Unit Description and Function Setting

Only the basic unit model has the function set switch and the input terminal. The DS16, D22 models have them at the side, and the D40, D60 models have them at the rear.

Expansion connector: Using for connecting units. Refer to 'Connection of units'.

Function set switches: ON/OFF switches for Input logic, Zero Blanking, Decimal number display, and DATA input Bit.

Input terminals: VCC (12-24VDC), GND (0V), DATA (Data input), CLOCK (CLOCK input), LATCH (LATCH input).

Input DATA Chart

When selecting 5-bit data input, it displays only shaded part (0 to 9, A to F). If there is no input data after supplying the power, the basic unit displays 'S'.

DS Series (7 Segment)	DA series (16 Segment)	DU series (unit)	High 2-bit	Low 4-bit
D5 D4 D3 D2 D1 D0	D5 D4 D3 D2 D1 D0	D5 D4 D3 D2	D3 D2	D1 D0
L L L L L L L	L L L L L L L	X X X X	L L	L L
0 0 G W 0 0 0 0 G W 0 0	0 0 G W 0 0 0 0 G W 0 0	No unit	L L	L L
1 1 H X 1 1 H X 1 1 H X 1 1	1 1 H X 1 1 H X 1 1 H X 1 1	Upper-Lower OFF	L L	L H
2 2 I Y 2 2 I Y 2 2 I Y 2 2	2 2 I Y 2 2 I Y 2 2 I Y 2 2	Upper-Lower ON	L L	H L
3 3 J Z 3 3 J Z 3 3 J Z 3 3	3 3 J Z 3 3 J Z 3 3 J Z 3 3	Upper ON	L L	H H
4 4 K -1 4 4 K -1 4 4 K -1 4 4	4 4 K -1 4 4 K -1 4 4 K -1 4 4	Lower ON	L H	L L
5 5 L (5 5 L (5 5 L (5 5	5 5 L (5 5 L (5 5 L (5 5	Upper-Lower flashes	L H	L H
6 6 M) 6 6 M) 6 6 M) 6 6	6 6 M) 6 6 M) 6 6 M) 6 6	Upper flashes	L H	H L
7 7 N . 7 7 N . 7 7 N . 7 7	7 7 N . 7 7 N . 7 7 N . 7 7	Lower flashes	L H	H H
8 8 O 0 8 8 O 0 8 8 O 0 8 8	8 8 O 0 8 8 O 0 8 8 O 0 8 8	※1	H L	L L
9 9 P A 9 9 P A 9 9 P A 9 9	9 9 P A 9 9 P A 9 9 P A 9 9		H L	L H
A A Q B A A Q B A A Q B A A	A A Q B A A Q B A A Q B A A		H L	H L
b B R / b B R / b B R / b B	b B R / b B R / b B R / b B		H L	H H
7 C S ? 7 C S ? 7 C S ? 7 C	7 C S ? 7 C S ? 7 C S ? 7 C		H H	L L
6 D T 0 6 D T 0 6 D T 0 6 D	6 D T 0 6 D T 0 6 D T 0 6 D		H H	L H
E U 0 X E U 0 X E U 0 X E U	E U 0 X E U 0 X E U 0 X E U		H H	H L
F 0 V = Blank F 0 V = Blank	F 0 V = Blank F 0 V = Blank		H H	H H

※1: If this data is not for the unit-display unit, it maintains former state.
 ※The unit-display unit does not use the upper bit over D4. (Don't care: X)
 ※Unit-display unit function: Upper/Lower selection, ON/Flash function.


※It is only available to use the unit-display unit with serial 5-bit, parallel 4/6-bit Dynamic 1 input when connecting the unit-display unit and turning ON it. (Do not input data to the unit-display unit.)
 ※To display two data using zero blanking function: Using the unit-display unit: If sending unit data signal after no.1 data (000123), it applies zero blanking function when displaying no.2 data (04567).

※Not using the unit-display unit: If sending no-unit data (HXXXLLL) after no.1 data (00123), it applies zero blanking function to display no.2 data. In this case, transmitted data should be added one to the display digits. (no-unit data is added)

When do not using unit-display unit, no-unit data is used for data division. If it does not send no-unit data (HXXXLLL), it displays no.1 data (00123) and no.2 data (04567) as one data. Zero-blanking function is applied to no.1 data only.

※Do not transmit unit data to the basic unit/expansion unit. Unit division bit (D7) of unit data is used only for unit division. When transmitting unit data to the basic/expansion unit, unit division bit (D7) displays the ignored data value. Zero blanking does not operate normally.


Data Input Method

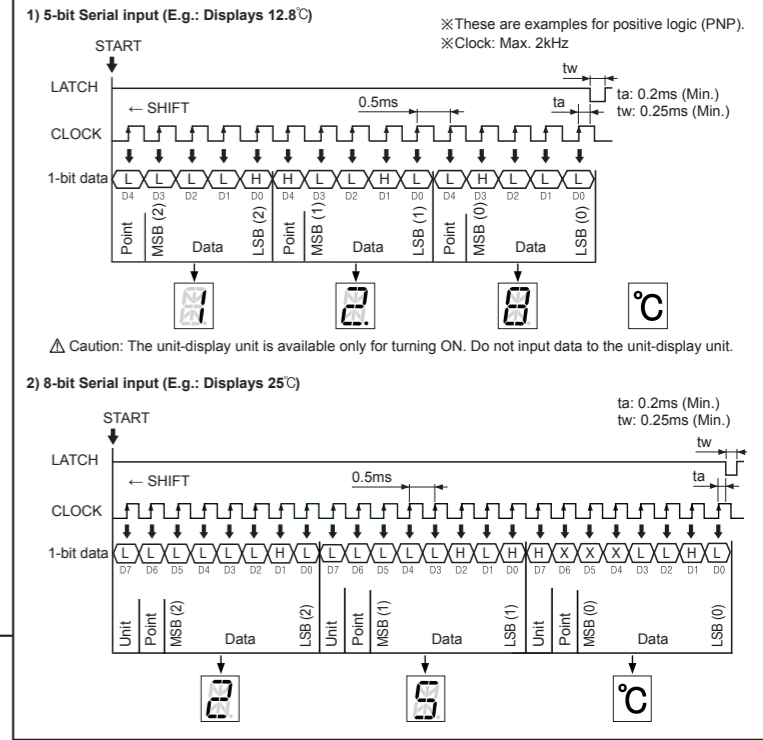

Unit-display Unit

This unit is for displaying unit by inserting a name plate. It has only 16, 22 sizes. (sold separately)

Size	Color	Red	Green
16mm		DU16-R	DU16-G
22mm		DU22-R	DU22-G

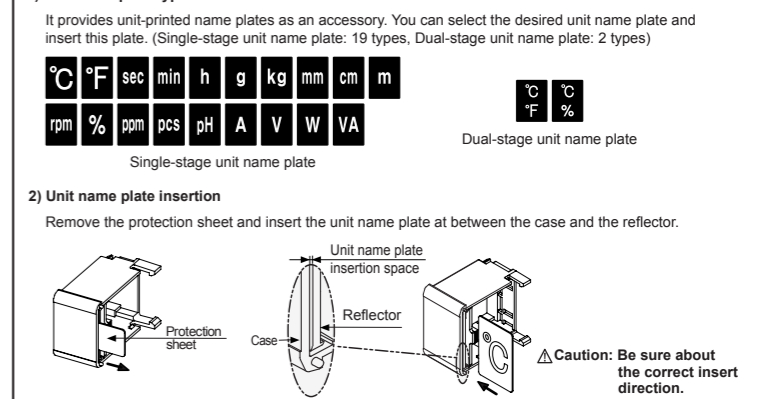

Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents.
- 12-24VDC power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Install a power switch or circuit breaker in the easily accessible place for supplying or disconnecting the power.
- Keep away from high voltage lines or power lines to prevent inductive noise. In case installing power line and input signal line closely, use line filter or varistor at power line and shielded wire at input signal line. Do not use near the equipment which generates strong magnetic force or high frequency noise.
- This unit may be used in the following environments.
 - Indoors (in the environment condition rated in 'Specifications')
 - Altitude max. 2,000m
 - Pollution degree 2
 - Installation category I

Major Products

- Photoelectric Sensors
- Fiber Optic Sensors
- Door Sensors
- Door Side Sensors
- Area Sensors
- Proximity Sensors
- Pressure Sensors
- Rotary Encoders
- Connectors/Sockets
- Switching Mode Power Supplies
- Control Switches/Lamps/Buzzers
- I/O Terminal Blocks & Cables
- Stepper Motors/Drivers/Motion Controllers
- Graphic/Logic Panels
- Field Network Devices
- Laser Marking System (Fiber, CO₂, Nd:YAG)
- Laser Welding/Cutting System
- Temperature Controllers
- Temperature/Humidity Transducers
- SSRs/Power Controllers
- Counters
- Timers
- Panel Meters
- Tachometer/Pulse (Rate) Meters
- Display Units
- Sensor Controllers

Autonics Corporation
<http://www.autonics.com>

HEADQUARTERS:
 18, Bansong-ro 513 beon-gil, Haeundae-gu, Busan, South Korea, 48002
 TEL: 82-51-519-3232
 E-mail: sales@autonics.com