Panasonic®

INSTRUCTION MANUAL

Ultra High-Speed, High-Accuracy Laser Displacement Sensor **Sensor Head** HL-C235CE. HL-C235CE-MK

MJF-HI C235CF No 0081-01V

Thank you very much for purchasing Panasonic products. Read this Instruction Manual carefully and thoroughly for the correct and optimum use of this product. Kindly keep this manual in a convenient place for quick reference.

⚠ WARNING

- . This product is intended to detect the objects and does not have the control function to ensure safety such as accident prevention.
- Do not use the product as a sensing device to protect human body.
- Be careful not to directly watch or touch the direct laser beam or reflected laser
- The product was developed and manufactured for industrial use

BEFORE USE

· Before using the product, check the sensor head model and contents of packing.



Sensor head model

Check the model name of product at the top of sensor head.

package.

 Packing Check that all of the following components are included in the

- 1 sensor head unit
- · 1 Instruction manual
- · Laser warning labels
- [JIS/IEC/KS: 1 set, GB: 1 set]
- This product satisfies the adaptation of CE product by using in combination with controller and programmable display, which are subjected to CE. Please confirm that there is CE mark on connecting controller's label

1 DESCRIPTION

- HL-C235CE, HL-C235CE-MK displacement sensor head achieves ultra highspeed and high-accurate measurement using linear image sensor as light receiving element to be used on equipment that require high-speed operation with high-
- The product is used at diffuse or specular reflection sensor head by installing and

2 CAUTIONS ON HANDLING LASER LIGHT

 In order to prevent the accident by laser product and protect the users. JIS C 6802-2014 "Safety of laser products" was established based on the regulation of IEC (International electrotechnical Commission). This regulation classifies laser products according to the level of hazard, and provides the safety measures for

HL-C235CE, HL-C235CE-MK are classified as "Class 3R laser products" according to IEC 60825-1-2014 (JIS C 6802-2014) "Safety of laser products"

Laser hazardous class

Classification according to IEC 60825-1-2014 (JIS C 6802-2014)

		,
Class	Model	Description of hazardous evaluation
Class 3R	HL-C235CE HL-C235CE-MK	Direct intrabeam viewing is hazardous, but risk is lower than for 3B.

WARNING label

In Japanese / English / Korean

- 1	注意一ここを聞くとクラス39のレーザ放射が出る 日への直接被ばくを避けること				
	CAUTION - CLASSER LASER RADIATION WHEN OPEN AVOID DIRECT EYE EXPOSURE				
	주의 = 개방시 3R등급 데이저 방사 직접 눈의 노출을 피하시오.				
Δ	レーザ放射 日への直接値ばくを 避けること	AVOID DIRECT EYE EXPOSURE	레이저 방사 리접 눈 노출을 뭐하시오.		
<u>/*\</u>	(最大出力) SmW (パルス報) 最大10ms (協質) 半導体レーザ (放長) 658mm	(MAXIMUM OUTPUT) 5mW (PULSE DURATION) 10ms max- (WEDIUM) 58MDONDUCTOR LASER (WAVELENGTH) 658mm	(최대 숲학) 5mW (祖스지수기간 최대IOns (매점) 반도체레이저 (과장) 658mm		
_	クラス3Rレーザ製品 (JB C 6922 2014)	CLASS3R LASER PRODUCT (EC00025-1 2014)	3R등급 레이지 제종 (KS C ED60825-1 2013)		
V L	一ザ放射の出口	LASER APERTURE	레이저 개구		


레이저 방사 직접는 노출을	AVOID DIRECT EYE	レーザ放射 日への直接後ばくを	l 🔥
피하시오.	EXPOSURE	避けること	I /.\
(의대 중액) 5mW (센스지수시간) 의대10ms (예정) 반도세레이저 (마장) 658mm	(MAXIMUM OUTPUT) SHW (PULSE DUPATION) TORKMAK (MEDIJM) SENECHDECTORIASER (WAVELENGTH) 658mm	(最大出力) SmW (バルス権) 最大10ms (採算) 半導体レーザ (接表) 658nm	<u>/*\</u>
3R등급 레이저 제품 (KS C (EC60825-1 2013)	CLASS3R LASER PRODUCT (JEO80825-1 2014)	クラス3月レーザ製品 (JBC 6802 2014)	_
레이저 개구	LASER APERTURE	レーザ放射の出	- V

In Chinese

	激光辐射	注意 打开时有3R英源光辐射
	避免眼睛受到直接照射	
/ 秦\	最大输出: 5mW 脉宽:最大10ms 媒体: 半导体激光 波长: 658nm	祖免郑荫受利直接捐制
	3R类激光产品 GB7247.1 2012	
IV □	激光窗口	



<Label position>

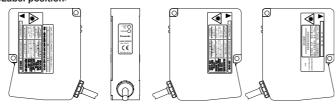

- Install the product so the laser beam comes higher or lower than eve level in or der not to watch the beam directly during operation. Laser safety distance (Nominal Ocular Hazard Distance: NOHD) is approx. 1.4m.
- The laser beam must be terminated at the end of its path by a diffuse reflector or an absorber
- · Please contact our company if the system breaks down. It is not equipped with a function that stops laser radiation automatically during disassembling the sensor head. The users therefore may be exposed to laser beam in disassembling the
- When this product is used in China, affix the Chinese warning label (accessory) on the label in the product.
- Do not use the system in the manner other than specified in this Instruction Manual.

3 EXPORT REGULATIONS BY JAPANESE GOVERNMENT

 Please follow the export control regulations required. HL-C235CE and HL-C235CE-MK are not subject to export control regulations under the condition that they are used combined with the non-pertinent controller to export control specified by Foreign Exchange and Foreign Trade Law. When they are combined with the pertinent controller to export control, they are subject to the Law. In this case export admission by Japanese government is required before the product is to be exported or brought out of the country.

4 SPECIFICATIONS

L		HL-C235CE		HL-C235CE-MK		
Mode	1 NO.	Diffuse Reflection	Specular Reflection	Diffuse Reflection	Specular Reflection	
Meas.	. method (Note 2)	Diffuse reflection / Specular reflection				
Meas	urement center distance	350mm	348mm	350mm	348mm	
Meas	urement range (Note 3)	±50mm	±42mm	±50mm	±42mm	
Beam	source	Red semiconductor laser Class 3R (JIS/IEC/GB/KS) Max output: 5mW, Emission Peak wavelength: 658nm				
Beam	diameter (Note 4)	Approx. ø250μm Approx. 250 × 3,500μm				
Beam	receiving element	Linear image sensor				
Resolution		2.0µm / average times: 256, 0.5µm /average times: 4,096				
Linea	rity	±0.03%F.S.				
Temp	erature characteristics	0.01%F.S./°C				
ndicator	Laser emission	Green LED: Lights up during laser emission.				
Indic	Meas. range	Yellow LED: Near measurement center:ON, within measurement range:Blink, beyond the range:OFF				
Protec	ctive structure		IP67 (excep	t connector)		
Pollut	ion degree	2				
Insula	ation resistance	20M ohms or more by 500V DC megger (between all the terminals and enclosure.)				
Dielectric withstand	Commercial Frequency	AC 500V for 1min. (between all the terminals and enclosure.)				
Diele	Impulse	±1,000V 1.2/50μs (between all the terminals and enclosure.)			losure.)	
Vibration resistance Shock resistance		Endurance: 10 to 55Hz (cycle: 1minute), Resistant amplitude of vibration: 1.5mm, in X, Y, and Z directions for 2 hours				
		196m/ s² in X, Y, and Z directions for 3 times				
Ambie	ent illuminance (Note 5)	3,000tx or less (illuminance at beam receiving surface using incandescent lamp)				
Ambient temperature		0 to +45°C (No dew condensation or icing allowed), At storage: -20 to +70°C				
Ambient humidity		35 to 85%RH At storage:35 to 85%RH				
Ambient Height		2,000m or less				
Material		Main unit case / cover: Die-cast aluminum, Front cover: Glass				
Cable length		0.5m				
Cable	extension	Extendible to 30m long maximum using the optional extension cable.				
Weigh	nt	Approx. 450g including cable weight				
Suited	d controller (Note 6)	Controller ver. 2.00 or later				
Annlic	cable regulations	Conformed to EMC Directive, Attained Korea's S-mark certification				

- uring conditions are as follows unless otherwise specified; connection with controller, power voltage 24V DC, ambient temperature: 20°C, sampling cycle: 40µs, average times:256, at measurement center distance, object substance: white ceramic, and digital measurement value.

 2) Use the external ND filter (optional) in case the amount of reflected beam is too large on Specular Reflection
- 3) The measurement range is limites between 0 and +50mm (in case the sampling cycle is 20µs at diffuse re-3) The measurement range is limites between 0 and +50mm (in case the sampling cycle is 20µs at diffuse reflection), between 0 and +42mm (in case the sampling cycle is 20µs at specular reflection), between +36 and +50mm (in case the sampling cycle is 10µs at diffuse reflection), or between +36 and +42mm (in case the sampling cycle is 10µs at specular reflection).
 4) The figure shows the value at measurement center distance. It is determined by 1/e² (approximately 13.5%) of center beam intensity. Due to leak light outside the specified area, the reflectance around the detecting point may be higher than at the point and this may affect the measurement value.
 5) The variation in ambient illuminance is ±0.03%F.S. or less.
 6) It does not work properly in case connected to the controller ver. 1.**.

5 CAUTIONS

• It does not work properly in case connected to the controller ver. 1.**. For proper use, connect to the controller ver. 2.00 or later

- Turn off the power of controller before connecting or disconnecting the connectors
- When connecting or disconnecting the connectors, be sure to hold the connector area not to apply extra force to the cable.
- . Be careful not to touch terminals or to let foreign matter get in the connector after disconnecting connectors.
- Be careful not to apply force to around the connector of standard cable and extension cable. Do not bend the cables near connectors. Failure to do so causes causes disconnection of the cable.

- Do not run the sensor cable along (bundled in parallel) with other wirings. Keep it at least 100mm away from other wires. Run the cable so it is separate from high voltage and power circuit lines. If it is necessary to run the cable in parallel with them, shield it by running through a grounded electrical conduit.
- Install the product as far away as possible from noise source such as high-voltage lines, high-voltage device, power lines, power device, machines which generate a large starting and stopping surge, welding machines and inverter motor.

 • Do not pull the cable using a force more than
- 29.4N when routing the cable with the sensor head and controller fixed. At least 20 mm is required from the cable connection to the bend. The bending radius must be 30 mm or more.
- When the sensor head is moved around while in use, the cable in the moving part may be damaged. Therefore, use an extension cable for the moving part and, when the extension cable is damaged, immediately replace it. Otherwise, it may result in failure

Cable Extension

- Use only one extension cable for connection between one sensor head and a controller.
- · When the sensor head part is moved around while in use, fix the extension cable at a position 100 mm away from the mobile end.

Warming up time

. Allow at least 30 minutes of warming up after turning on the power to ensure the performance of the product.


• The life of the semiconductor laser depends on the ambient temperature during use. When using the product near a heat source, take measures to lower the ambient temperature of the sensor head as possible. Mount the sensor on a device having good heat radiation because the sensor itself emits heat.

Notes: 1) When installing 2 sensor heads in parallel at a 20mm or less interval, mount each sensor head on an aluminum or iron plate having a 200cm² surface area.

- Water, oil, or fingerprints on the emitter surface and receiver surface of sensor head reflects light. Dust and dirt on them block light. Keep them clean at all times. When cleaning these parts, wipe them off using a soft lint-free cloth or lens clean-
- Install the sensor head so ambient light such as sunlight or light with the same wavelength as laser beam should not enter the light receiver. If high accuracy is required, install a light shielding plate or the like on the sensor head.
- The controller and connectors are not structurally dustproof, waterproof, or corrosion-resistant. Do not use the product underwater or in the rain.
- Do not use the product in dusty places or that exposed to flammable or corrosive gases, droplet, direct sunlight, severe vibration or impact.

6 MEASUREMENT RANGE / INDICATOR


Installation Mode: Diffuse

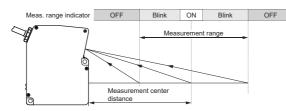


• The measurement range indicator at sampling cycle of 20µs or 10µs lights up at the center of limited measurement range

7 MUTUAL INTERFERENCE AREA (Unit: mm)

• When installing 2 or more sensor heads side by side, mutual interference occurs if the laser spots from other sensor heads fall within the shaded areas in the right figure. Install sensor heads so the laser spots from other sensor heads fall outside the shaded areas.

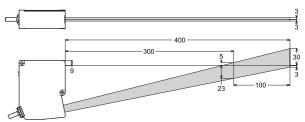


8 BEAM DIAMETER (Unit: mm)

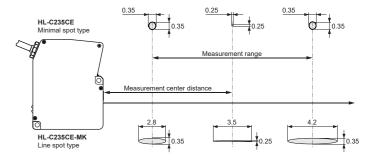


9 DIMENSIONS (Unit: mm)

Installation Mode: Diffuse

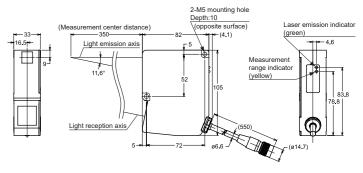

Installation Mode: Specular

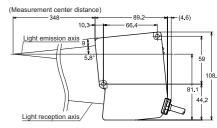

10 OPTION

• ND filter (product code: HL-C2F01) is optionally available to adjust the excessive received light intensity to an optimum level. This is useful when mounting the sensor head for specular reflection.

Panasonic Corporation

Panasonic Industrial Devices SUNX Co., Ltd.

https://panasonic.net/id/pidsx/global Please visit our website for inquiries and about our sales network.

© Panasonic Industrial Devices SUNX Co., Ltd. 2022 PRINTED IN JAPAN