


## High Performance, Digital Panel Meter

### ■ Features

- 3 types of operation mode are added. (total 16 types of operation mode)  
Frequency/Revolutions/Speed, Passing speed, Cycle, Passing time, Time interval, Time differential, Absolute ratio, Error ratio, Density, Error, Length measurement 1, Length measurement 2, Interval, Accumulation, Addition/Subtraction-individual input, Addition/Subtraction-phase difference input
- Various output models  
Relay triple/quintuple output, NPN/PNP open collector quintuple output, BCD dynamic output, PV transmission output (current output), **RS485 communication output (changed Modbus RTU)**
- Various functions  
Selectable NPN solid state/contact input, PNP solid state/contact input, prescale, delay monitoring, hysteresis, auto-zero time setting, lock setting, data bank function (MP5W series)
- Max. display range: -19999 to 99999
- Various display units  
rpm, rps, Hz, kHz, sec, min, m, mm, mm/s, m/s, m/min, m/h, l/s, l/min, l/h, %, counts, etc.

Shaded parts (■) are changed and added functions from previous MP5.

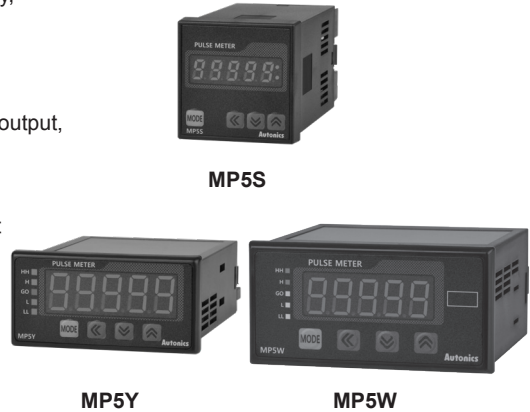

⚠ Please read "Safety Considerations" in operation manual before using.



### ■ Ordering Information




MP 5 Y - 4 N

	Output		Main output (comparative value output)	Sub output (display value output)
	S	N	Indicator	—
Y	N		Indicator	—
	1		NPN open collector quintuple output	—
	2		PNP open collector quintuple output	—
	3		Indicator	BCD dynamic output
	4		Indicator	PV transmission output (current output)
	5		Indicator	RS485 communication output
W	N		Indicator	—
	A		Relay quintuple output (HH, H, GO, L, LL)	—
	1		Relay triple output (H, GO, L)	—
	2		NPN open collector quintuple output	BCD dynamic output
	4		NPN open collector quintuple output	PV transmission output (current output)
	5		PNP open collector quintuple output	PV transmission output (current output)
Power supply	2		24VAC 50/60Hz, 24-48VDC	
	4		100-240VAC 50/60Hz	
	Size			
Size	S		DIN W48×H48mm	
	Y		DIN W72×H36mm	
	W		DIN W96×H48mm	
Digits	5		99999 (5-digit)	
Item	MP		Pulse meter	

- (A) Photoelectric Sensors
- (B) Fiber Optic Sensors
- (C) Door/Area Sensors
- (D) Proximity Sensors
- (E) Pressure Sensors
- (F) Rotary Encoders
- (G) Connectors/ Connector Cables/ Sensor Distribution Boxes/Sockets
- (H) Temperature Controllers
- (I) SSRs / Power Controllers
- (J) Counters
- (K) Timers
- (L) Panel Meters
- (M) Tacho / Speed / Pulse Meters
- (N) Display Units
- (O) Sensor Controllers
- (P) Switching Mode Power Supplies
- (Q) Stepper Motors & Drivers & Controllers
- (R) Graphic/ Logic Panels
- (S) Field Network Devices
- (T) Software

# MP5S/MP5Y/MP5W Series

## ■ Specifications

Series		MP5S	MP5Y	MP5W
Display method		7-segment LED (zero blanking method)		
Character size		W4×H8mm	W7×H14mm	
Display range		-19999 to 99999		
Power supply	AC voltage	100-240VAC~ 50/60Hz		
	AC/DC voltage	24VAC~ 50/60Hz, 24-48VDC=		
Power consumption	AC voltage	Max. 7.5VA (100-240VAC~ 50/60Hz)	Max. 9VA (100-240VAC~ 50/60Hz)	Max. 15VA (100-240VAC~ 50/60Hz)
	AC/DC voltage	Max. 6VA (24VAC~ 50/60Hz), max. 4.5W (24-48VDC=)	Max. 7VA (24VAC~ 50/60Hz), max. 6.2W (24-48VDC=)	Max. 11VA (24VAC~ 50/60Hz), max. 7W (24-48VDC=)
Permissible voltage range		90 to 110% of rated voltage		
External power supply		Max. 12VDC= ±10% 80mA		
Sub power supply		—		Max. 24VDC= 30mA
Input frequency		·Solid state input 1: max. 50kHz (pulse width: min. 10μs) ·Solid state input 2: max. 5kHz (pulse width: min. 100μs) ※ For F7, F8, F9, F10 operation mode, max. 1kHz (pulse width: min. 500μs) ·Contact input: max. 45Hz (pulse width: min. 11ms)		
Input method		[Voltage input] High: 4.5-24VDC=, Low: 0-1VDC, Input impedance: 3.9kΩ [No-voltage input] Short-circuit impedance: Max. 80Ω, Residual voltage: Max. 1VDC, Open-circuit impedance: Min. 100kΩ		
Measurement range		·Operation mode F1, F2, F7, F8, F9, F10 : 0.0005Hz to 50kHz ·Operation mode F3, F4, F5, F6 : 0.01 to max. of each time range ·Operation mode F11, F12, F13, F16 : 0 to 99999 ·Operation mode F14, F15 : -199999 to 99999		
Measurement accuracy (23°C±5°C)		·Operation mode F1, F2, F7, F8, F9, F10 : F.S.±0.05%rdg±1-digit ·Operation mode F3, F4, F5, F6 : F.S.±0.01%rdg±1-digit		
Display cycle		OFF (for F2, F16 operation mode), 0.05, 0.5, 1, 2, 4, 8 sec (same as update output cycle)		
Operation mode		Frequency/Revolutions/Speed (F1), Passing speed (F2), Cycle (F3), Passing time (F4), Time interval (F5), Time differential (F6), Absolute ratio (F7), Error ratio (F8), Density (F9), Error (F10), Length measurement 1 (F11), Interval (F12), Accumulation (F13), Addition/Subtraction-individual input (F14), Addition/Subtraction-phase difference input (F15), Length measurement 2 (F16)		
Prescale function		Direct input method (0.0001×10 <sup>-9</sup> to 9.9999×10 <sup>3</sup> )		
Hysteresis		0 to 9999 <sup>※1</sup>		
Output	Main	Relay triple	250VAC~ 3A resistive load	
		Relay quintuple	—	250VAC~ 3A resistive load
		NPN/PNP open collector quintuple	—	Max. 30VDC= 30mA
	Sub	BCD dynamic	Max. 30VDC= 30mA	
		PV transmission	DC4-20mA/DC0-20mA max. load 500Ω	
		Communication	RS485 communication output (Modbus RTU method)	
Memory retention		Non-volatile memory (number of inputs: 100,000 operations)		
Insulation resistance		Over 100MΩ (at 500VDC megger)		
Dielectric strength		2,000VAC 60Hz for 1 min		
Noise immunity		±2kV the square wave noise (pulse width: 1μs) by the noise simulator		
Vibration	Mechanical	0.75mm amplitude at frequency of 10 to 55Hz in each X, Y, Z direction for 1 hour		
	Malfunction	0.5mm amplitude at frequency of 10 to 55Hz in each X, Y, Z direction for 10 min		
Shock	Mechanical	300m/s <sup>2</sup> (approx. 30G) in each X, Y, Z direction for 3 times		
	Malfunction	100m/s <sup>2</sup> (approx. 30G) in each X, Y, Z direction for 3 times		
Relay life cycle	Mechanical	—		Min. 10,000,000 operations
	Electrical	—		Min. 100,000 operations (250VAC 3A resistive load)
Environment	Ambient temp.	-10 to 50°C, storage: -20 to 60°C		
	Ambient humi.	35 to 85%RH, storage: 35 to 85%RH		
Approval		  		
Weight <sup>※2</sup>		Approx. 191g (approx. 132g)	Approx. 230g (approx. 140g)	Approx. 334g (approx. 210g)

※1: Setting range will vary depending on the decimal point.


※2: The weight includes packaging. The weight in parenthesis is for unit only.

※Environment resistance is rated at no freezing or condensation.

## ■ Connections

※Terminal connections differ by power supply and output type of each series and model.

### ○ MP5S Series

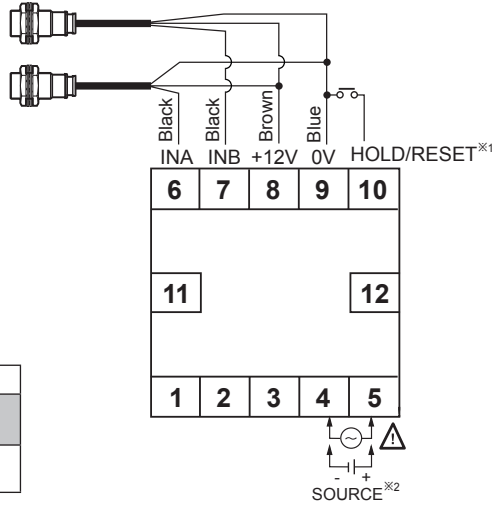

※1: Operation mode F1 to F12  
: display value HOLD  
Operation mode F13 to F16  
: display value RESET


※2:

Model	Source
MP5S-2N	24-48VDC 24VAC 50/60Hz
MP5S-4N	100-240VAC 50/60Hz

### ○ MP5Y Series

#### ● Power/Input Terminal (Common)

※MP5Y-□N (indicator) only has 'Power/Input terminals'.

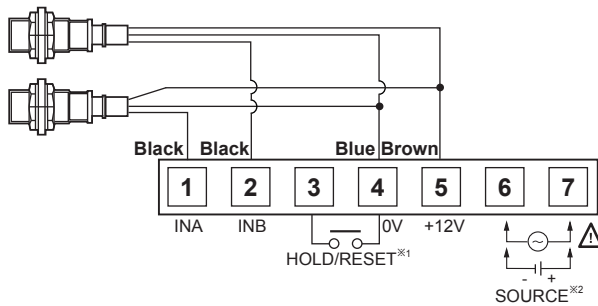

※1: Operation mode F1 to F12  
: display value HOLD  
Operation mode F13 to F16  
: display value RESET

※2:

Model	Source
MP5Y-2□	24-48VDC 24VAC 50/60Hz
MP5Y-4□	100-240VAC 50/60Hz

#### ● Output Connector (MP5Y-□1 to 5)


※Hirose connector: HIF3BA-10PA-2.54DS

※Hirose connector socket: HIF3BA-10D-2.54R (sold separately)

※Hirose connector socket is not included. Contact a Hirose connector dealer regarding sockets and cables.


#### ● MP5Y-□1 (NPN open collector output)

**MAIN OUT (NPN OPEN COLLECTOR)**  
30VDC 30mA

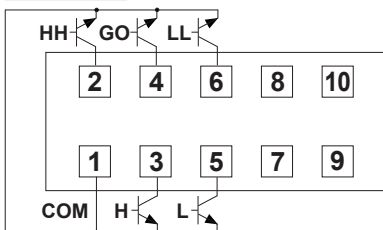

#### ● MP5Y-□2 (PNP open collector output)

**MAIN OUT (PNP OPEN COLLECTOR)**  
30VDC 30mA

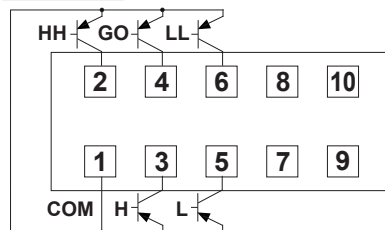

(A) Photoelectric Sensors

(B) Fiber Optic Sensors

(C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure Sensors

(F) Rotary Encoders

(G) Connectors/  
Connector Cables/  
Sensor Distribution  
Boxes/Sockets

(H) Temperature Controllers

(I) SSRs / Power Controllers

(J) Counters

(K) Timers

(L) Panel Meters

(M) Tacho /  
Speed / Pulse  
Meters

(N) Display Units

(O) Sensor Controllers

(P) Switching  
Mode Power  
Supplies

(Q) Stepper Motors  
& Drivers  
& Controllers

(R) Graphic/  
Logic  
Panels


(S) Field  
Network  
Devices

(T) Software

# MP5S/MP5Y/MP5W Series

## • MP5Y-□3 (BCD dynamic output)


BCD OUT (NPN OPEN COLLECTOR)  
30VDC 30mA

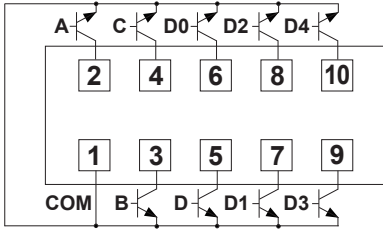


※Autonics display unit (DS/DA Series) is recommended for stable minus (-) sign display.

## • MP5Y-□4 (PV transmission output)

DC4-20mA/DC0-20mA  
Load 500Ω Max.

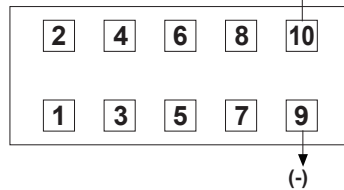


## • MP5Y-□5 (RS485 communication output)

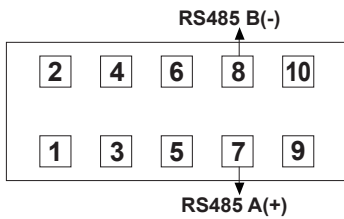

## • Output Terminal (MP5Y-□6)


### • MP5Y-□6 (Relay triple output)

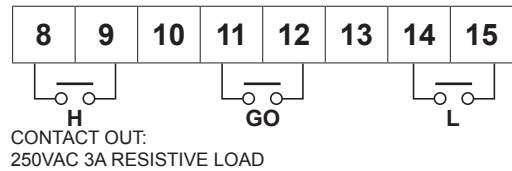

## ◎ MP5W Series

### • Power/Input Terminal (Common)

※MP5W-□N (indicator) only has 'Power/Input terminals'.

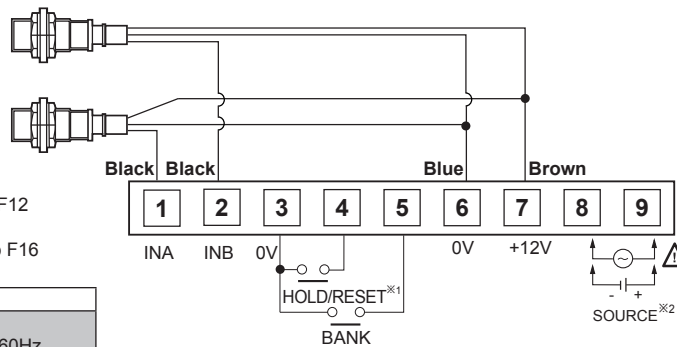


※1: Operation mode F1 to F12  
: display value HOLD  
Operation mode F13 to F16  
: display value RESET

※2: Model	Source
MP5W-2□	24-48VDC 24VAC 50/60Hz
MP5W-4□	100-240VAC 50/60Hz

### • Output Terminal (MP5W-□A/1)


#### • MP5W-□A (Relay quintuple output)

CONTACT OUT:  
250VAC 3A RESISTIVE LOAD

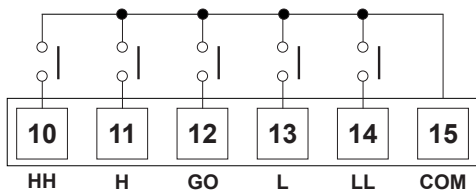

#### • MP5W-□1 (Relay triple output)

CONTACT OUT:  
250VAC 3A RESISTIVE LOAD

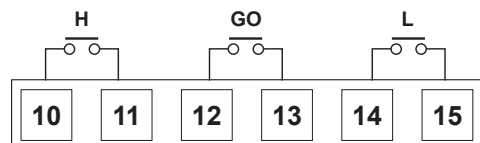

## • Output Connector (MP5W-□2/4/5/8/9)

※Hirose connector: HIF3BA-20PA-2.54DS


※Hirose connector socket: HIF3BA-20D-2.54R (sold separately)

※Hirose connector socket is not included. Contact a Hirose connector dealer regarding sockets and cables.

※1: Sub power supply


※2: POL signal turns ON when the display value is a minus (-) value.

### • MP5W-□2 (NPN open collector+BCD dynamic output)

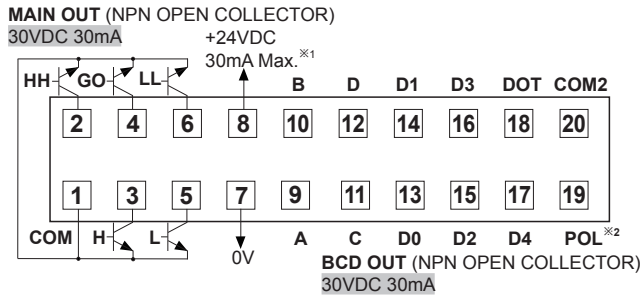


※Autonics display unit (DS/DA Series) is recommended for stable minus (-) sign display.


### • MP5W-□4 (NPN open collector+PV transmission output)

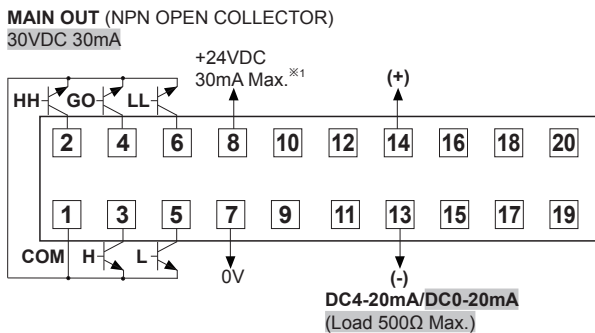


### • MP5W-□5 (PNP open collector+PV transmission output)

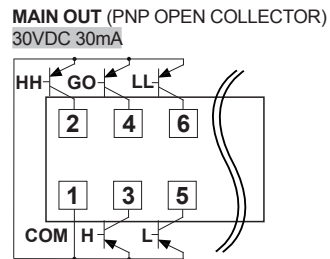

### • MP5W-□8 (NPN open collector+RS485 comm. output)

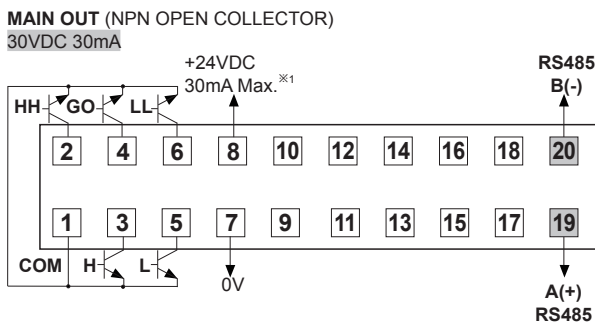

### • MP5W-□9 (PNP open collector+RS485 comm. output)

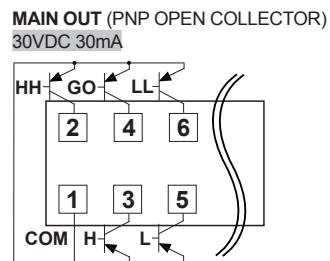

(A) Photoelectric Sensors

(B) Fiber Optic Sensors

(C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure Sensors

(F) Rotary Encoders

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/Sockets

(H) Temperature Controllers

(I) SSRs / Power Controllers

(J) Counters

(K) Timers

(L) Panel Meters

(M) Tacho / Speed / Pulse Meters

(N) Display Units

(O) Sensor Controllers

(P) Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels

(S) Field Network Devices

(T) Software

# MP5S/MP5Y/MP5W Series



## ■ Dimensions

(unit: mm)


※Nameplate design is changed from the previous MP5.

※Side dimensions of MP5Y/W differ by output type.


### ●MP5S Series

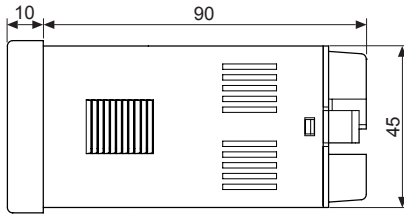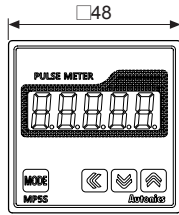


### ●MP5Y Series

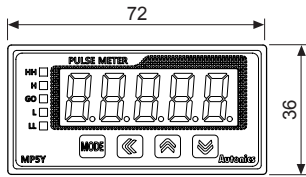

### ●MP5Y-□1/2/3/4/5

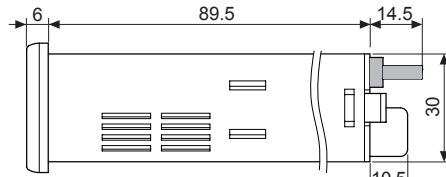


### ●MP5Y-□6

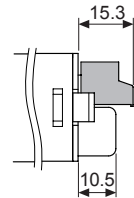


※MP5Y-□N (indicator) does not include the shaded part (output Hirose connector or output terminal).


### ●MP5W Series

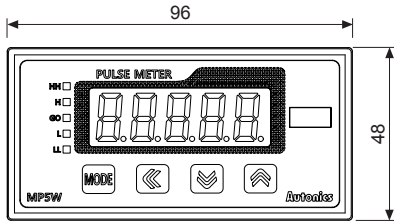

### ●MP5W-□2/4/5/8/9

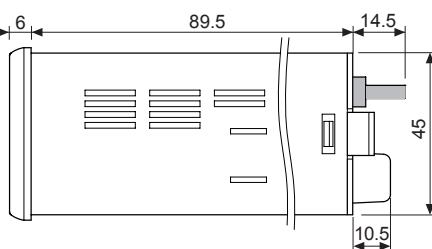


### ●MP5W-□A/1

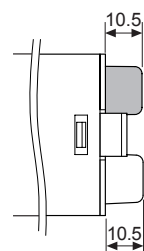

※MP5W-□N (indicator) does not include the shaded part (output Hirose connector or output terminal).

### ● Panel cut-out dimensions

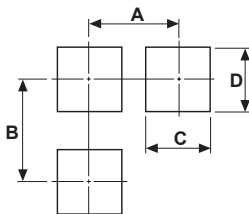


(unit: mm)


Series \ Size	A	B	C	D
MP5S	Min. 55	Min. 62	45.5 <sup>+0.5</sup> <sub>0</sub>	45.5 <sup>+0.5</sup> <sub>0</sub>
MP5Y	Min. 91	Min. 40	68 <sup>+0.7</sup> <sub>0</sub>	31.5 <sup>+0.5</sup> <sub>0</sub>
MP5W	Min. 116	Min. 52	92 <sup>+0.8</sup> <sub>0</sub>	45 <sup>+0.8</sup> <sub>0</sub>

### ● Bracket

#### ● For MP5S

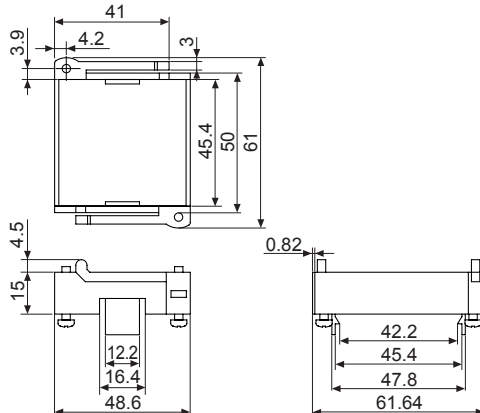


#### ● For MP5Y/W

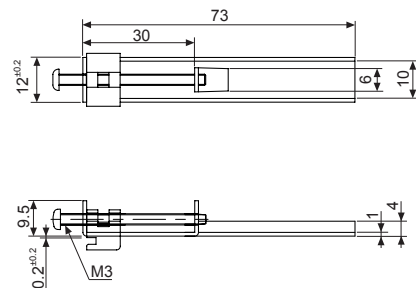

## Unit Description

### ●MP5S Series

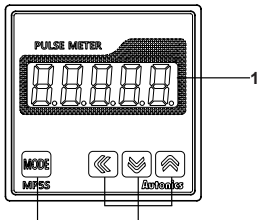

#### 1: Display component

Displays current value in RUN mode.  
Alternately displays setting parameters and corresponding value in SETTING mode.

#### 2: MODE key


In RUN mode, press the key once to check max./min. value.  
In RUN mode, hold the key for over 2 sec to enter parameter groups.

#### 3: [Left Arrow], [Right Arrow], [Enter] key


Select parameter groups, and select or setting values in the corresponding parameters.

#### 4: Output status indicator

### ●MP5Y Series

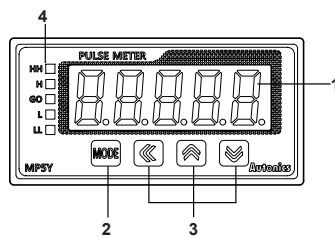

### ●MP5W Series

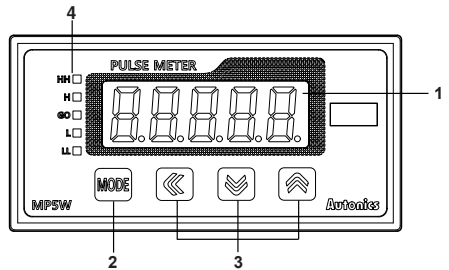

## Sold Separately

### ◎ Communication converter

#### ●SCM-WF48

(Wi-Fi to RS485-USB wireless communication converter)



#### ●SCM-US48I

(USB to RS485 converter)



#### ●SCM-38I

(RS232C to RS485 converter)



### ◎ Display Units (DS/DA-T Series)

#### ●DS/DA-T Series

(RS485 communication input type display unit) CE



DS16□□□



DS22/DA22□□□



DS40/DA40□□□



DS60/DA60□□□

※Connect RS485 communication input type display unit (DS/DA-T Series) and RS485 communication output model of MP5Y/MP5W Series, the display unit displays present value of the device without PC/PLC.

## Input Specifications

### ◎ Input Specifications

#### 1. Input signal

Standard duty ratio of input signal is 1:1.

##### (1) Solid state input 1

Input frequency: Max. 50kHz (ON/OFF pulse width: min. 10μs of each)

##### (2) Solid state input 2

Input frequency: Max. 5kHz (ON/OFF pulse width: min. 100μs of each)

※For F7, F8, F9, F10 operation mode, max. 1kHz (ON/OFF pulse width: min. 500μs of each)

##### (3) Contact input

① Input frequency: Max. 45Hz (when each ON/OFF pulse width is over 11ms)

② Contact specifications: 12VDC, stable switching of load current as small as 5mA


#### 2. Input type [ n-A, l n-b ]

MP5 allows selection between NPN input (solid state/contact) or PNP input (solid state/contact).


##### (1) NPN input type

①Contact

②NPN voltage output type sensor

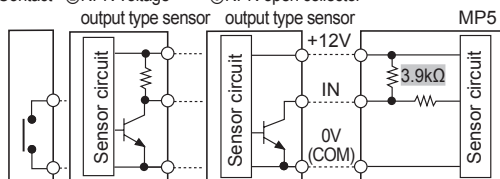


③NPN open collector output type sensor

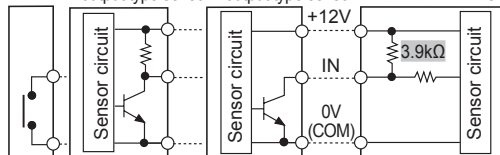



##### (2) PNP input type

①Contact

②PNP voltage output type sensor

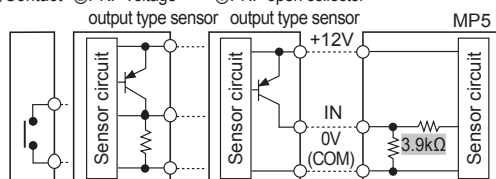

③PNP open collector output type sensor

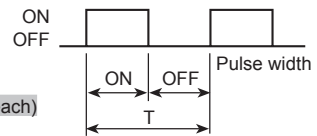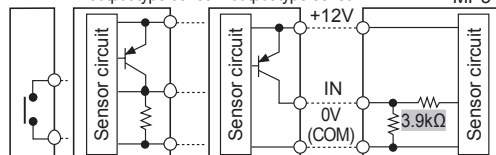

※T: single cycle of input signal

(A) Photoelectric Sensors

(B) Fiber Optic Sensors

(C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure Sensors

(F) Rotary Encoders

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/Sockets

(H) Temperature Controllers

(I) SSRs / Power Controllers

(J) Counters

(K) Timers

(L) Panel Meters

(M) Tacho / Speed / Pulse Meters

(N) Display Units

(O) Sensor Controllers

(P) Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels

(S) Field Network Devices

(T) Software

# MP5S/MP5Y/MP5W Series

## Output Specifications

### 1. Relay output

- ① Output: Comparative or alarm output (refer to "Output Modes")
- ② Output type: Relay
- ③ Contact capacity: 250VAC 3A resistive load
- ④ Life cycle: [Mechanical] min. 10,000,000 operations (switching frequency 180 operations/min)  
[Electrical] min. 100,000 operations (3A 250VAC, 30VDC resistive load) (switching frequency 20 operations/min)


### 2. Transistor output

- ① Output: Comparative output or alarm output (refer to "Output Modes")
- ② Output type: NPN/PNP open collector
- ③ Rated load voltage: 30VDC
- ④ Max. load current: 30mA

### 3. BCD dynamic output (negative logic)


- ① Output: present value
- ② Output signal: BCD data (A, B, C, D, DOT)  
← A: lowest bit, DOT: highest bit  
Digit data (D0, D1, D2, D3, D4)  
← D0: lowest digit, D4: highest digit
- ③ Output type: NPN open collector
- ④ Rated load voltage: 30VDC
- ⑤ Max. load current: 30mA
- ⑥ Dynamic COM cycle (T) = 40ms

E.g.) To display value = 125.89 by BCD dynamic output

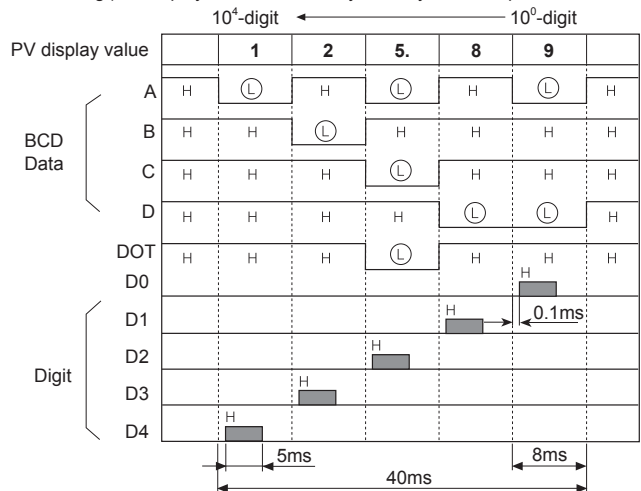


### 4. PV transmission output

- ① Application: transmit measured value
  - ② Function: transmit measured value within setting range of high-limit output [F5-H] to low-limit output [F5-L] after conversion into DC4-20mA or DC0-20mA current.
  - ③ Output range of high/low-limit  
·High-limit [F5-H] range: From min. value to max. value within measurement range  
·Low-limit [F5-L] range: From min. value to max. value within measurement range ( $[F5-H] \geq [F5-L] + 1$ )
- (1) DC4-20mA transmission output
- ① Transmit measured value within setting range of high-limit output [F5-H] to low-limit output [F5-L] after conversion into DC4-20mA current.
  - ② Resistive load: Max. 500Ω
  - ③ Resolution: 8000 divisions

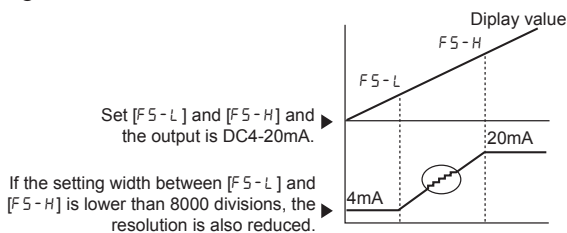

### (2) DC0-20mA transmission output

- ① Transmit measured value within setting range of high-limit output [F5-H] to low-limit output [F5-L] after conversion into DC0-20mA current.
- ② Resistive load: Max. 500Ω
- ③ Resolution: 10,000 divisions

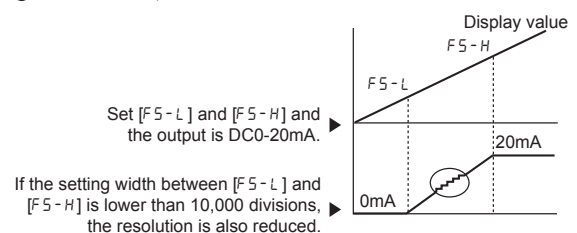


### 5. RS485 communication output

Comm. protocol	Modbus RTU	Communication Speed	2400, 4800, 9600 (default), 19200, 38400 bps
Connection type	RS485	Communication response time	5 to 99ms (default: 20ms)
Application standard	Compliance with EIA RS485	Start Bit	1-bit fixed
Max. connection	31 units (address: 01 to 99)	Data Bit	8-bit fixed
Synchronous method	Asynchronous	Parity Bit	None (default), Even, Odd
Comm. method	Two-wire half duplex	Stop Bit	1, 2-bit (default)
Comm. distance	Max. 800m		

※For more information about RS485 communication output specifications, refer to 'RS485 Communication Output'.




## Parameter Groups

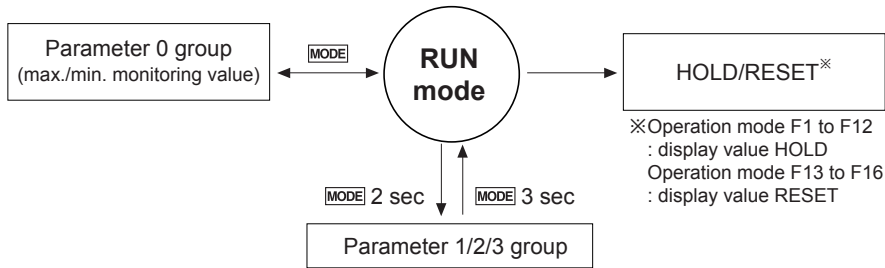

- ※ Press the **←**, **↑**, **↓** keys to select or set the desired value.
- ※ Press the **MODE** key once after changing the setting value, to save the setting value and move to the next parameter.
- ※ Hold the **MODE** key for 1.5 sec at any parameters to return to the select parameter group mode.
- ※ Hold the **MODE** key for 3 sec to save the setting value and return to RUN mode after changing the setting value.
- ※ If there is no key input for 60 sec while setting the parameters, the new settings are ignored, and the unit will return to RUN mode with previous settings.
- ※ The dotted line parameters may not appear depending on output specifications or other parameter settings. Please refer to **Operation Mode by Parameter Group**.
- ※ 1: Each parameter and corresponding setting value will flash alternately every 0.5 sec.

### Parameter 0 group

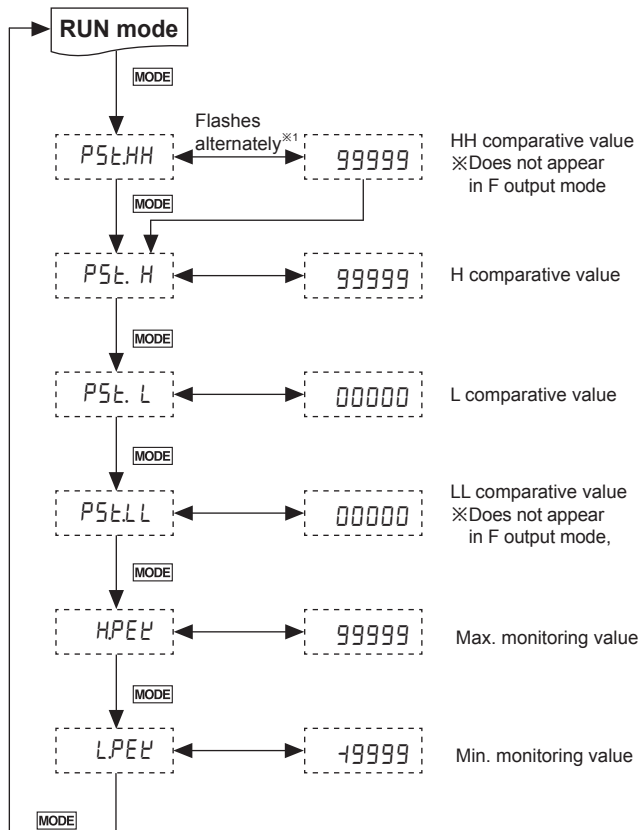

※ The parameters are identical to [P5t.HH], [P5t.H], [P5t.L], [P5t.LL] of parameter 2 group and the setting values will be linked.

#### Setting range by operation mode

Operation mode	Setting range
F1, F2, F7, F9, F11, F12, F13, F16	0 to 99999
F3, F4, F5, F6	0 to setting time range
F8, F10, F14, F15	-99999 to 99999

(the setting range varies depending on the decimal point setting.)


※ Only appears in comparative value setting models.

※ Resetting monitoring value : Hold the **←** key for over 2 sec (reset current value)


- (A) Photoelectric Sensors
- (B) Fiber Optic Sensors
- (C) Door/Area Sensors
- (D) Proximity Sensors
- (E) Pressure Sensors
- (F) Rotary Encoders
- (G) Connectors/ Connector Cables/ Sensor Distribution Boxes/Sockets
- (H) Temperature Controllers
- (I) SSRs / Power Controllers
- (J) Counters
- (K) Timers
- (L) Panel Meters
- (M) Tacho / Speed / Pulse Meters
- (N) Display Units
- (O) Sensor Controllers
- (P) Switching Mode Power Supplies
- (Q) Stepper Motors & Drivers & Controllers
- (R) Graphic/ Logic Panels
- (S) Field Network Devices
- (T) Software

# MP5S/MP5Y/MP5W Series

## Parameter 1 group

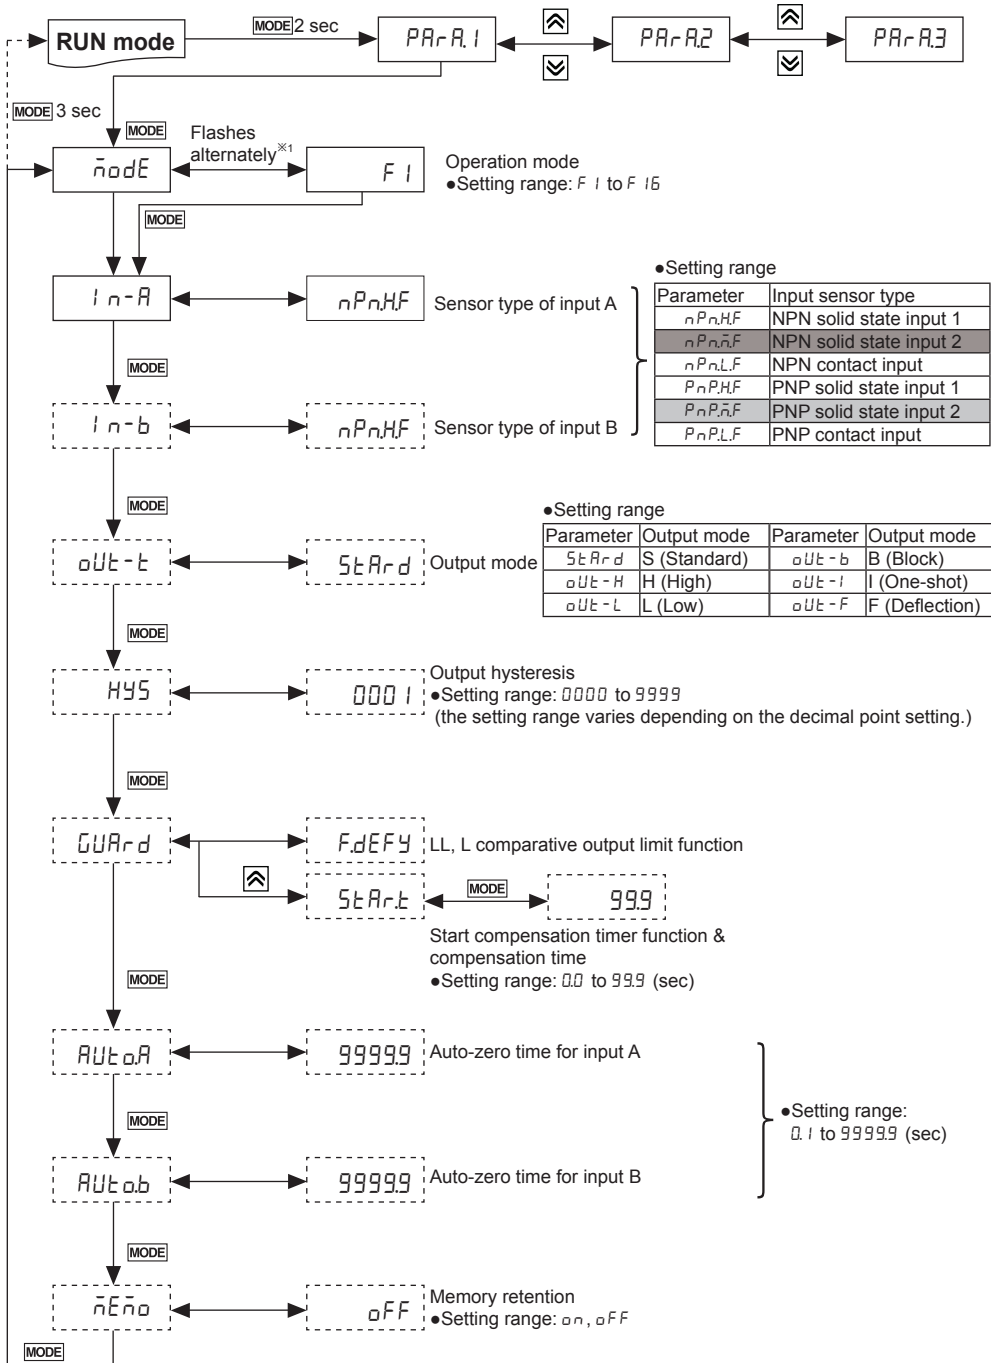

## Parameter 2 group

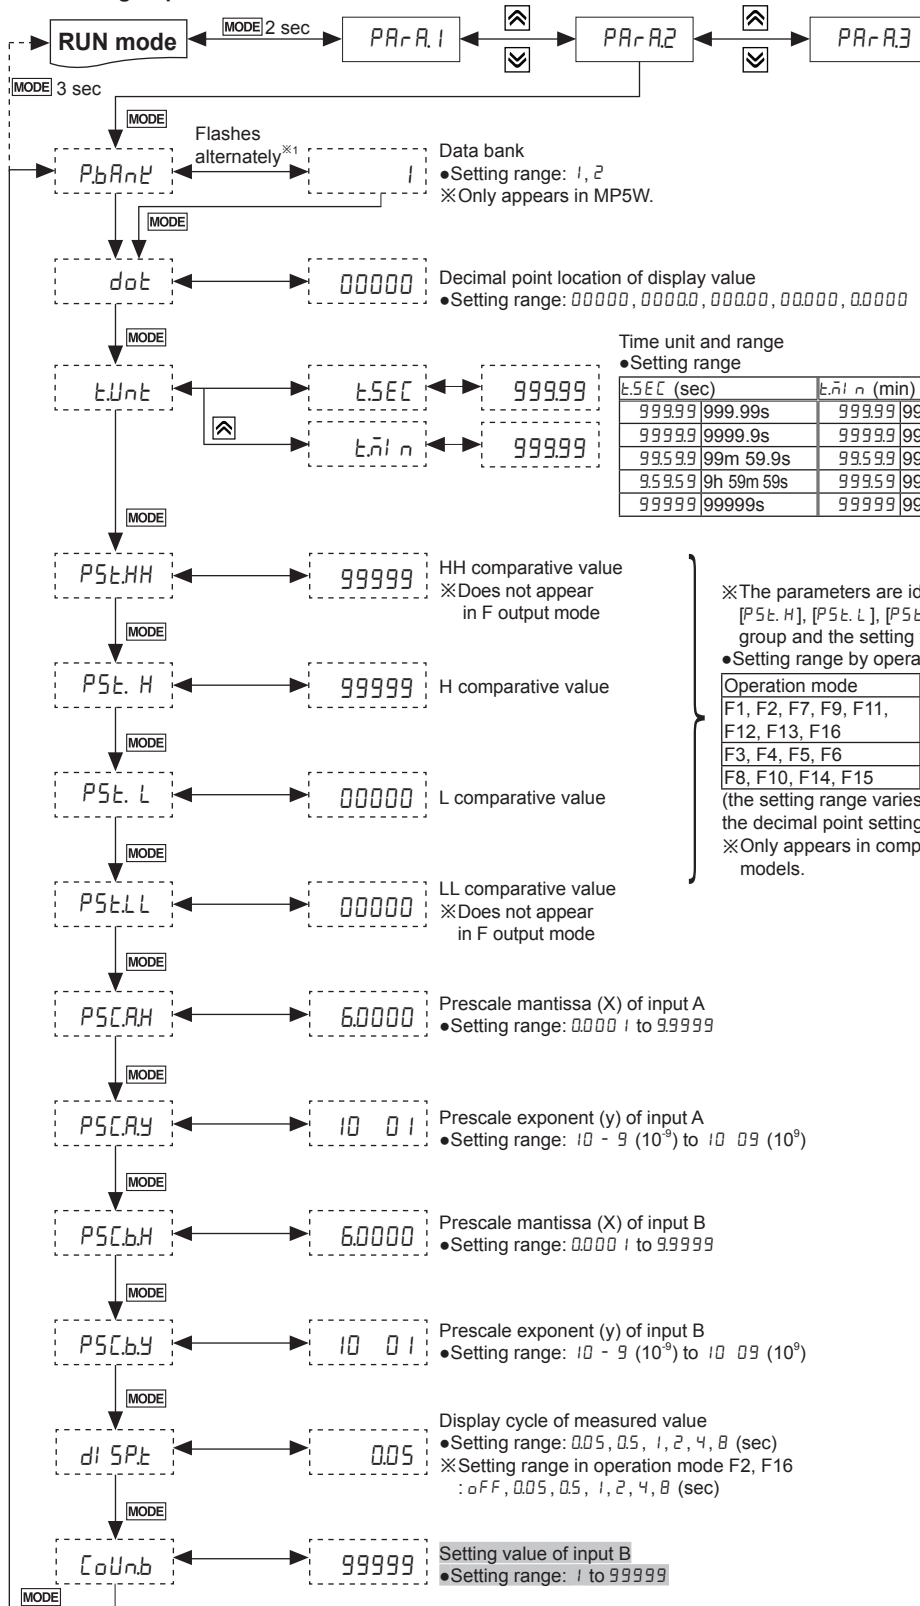

※The parameters are identical to [P5t.H], [P5t.H], [P5t.L], [P5t.LL] of parameter 0 group and the setting values will be linked.  
 ●Setting range by operation mode


Operation mode	Setting range
F1, F2, F7, F9, F11, F12, F13, F16	0 to 99999
F3, F4, F5, F6	0 to set time range
F8, F10, F14, F15	19999 to 99999

(the setting range varies depending on the decimal point setting.)  
 ※Only appears in comparative value setting models.

- (A) Photoelectric Sensors
- (B) Fiber Optic Sensors
- (C) Door/Area Sensors
- (D) Proximity Sensors
- (E) Pressure Sensors
- (F) Rotary Encoders
- (G) Connectors/ Connector Cables/ Sensor Distribution Boxes/Sockets
- (H) Temperature Controllers
- (I) SSRs / Power Controllers
- (J) Counters
- (K) Timers
- (L) Panel Meters
- (M) Tacho / Speed / Pulse Meters
- (N) Display Units
- (O) Sensor Controllers
- (P) Switching Mode Power Supplies
- (Q) Stepper Motors & Drivers & Controllers
- (R) Graphic/ Logic Panels
- (S) Field Network Devices
- (T) Software

# MP5S/MP5Y/MP5W Series

## • Parameter 3 group

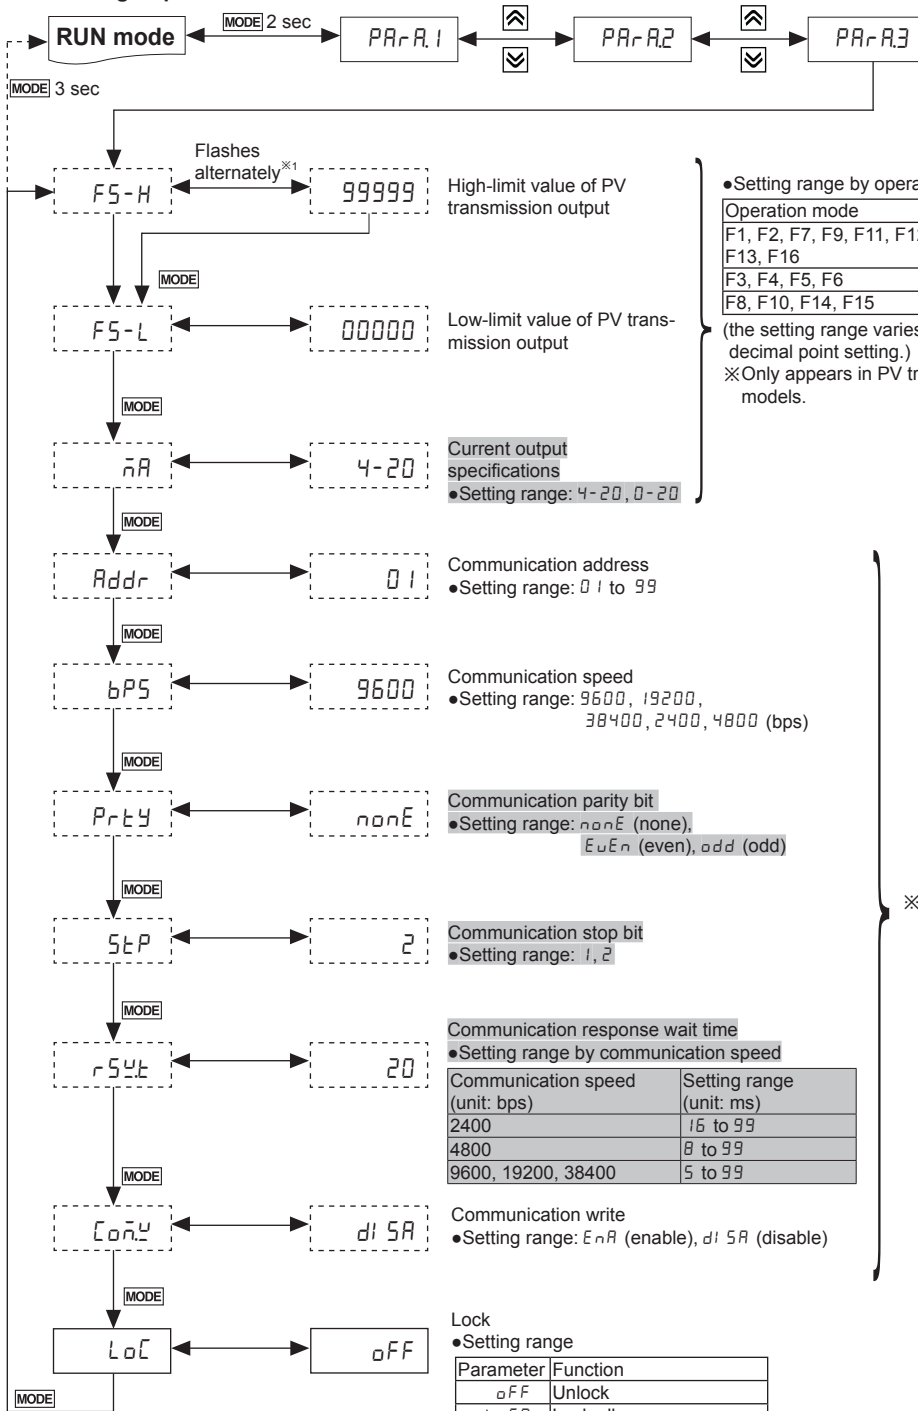

### •Setting range by operation mode

Operation mode	Setting range
F1, F2, F7, F9, F11, F12, F13, F16	0 to 99999
F3, F4, F5, F6	0 to set time range
F8, F10, F14, F15	+9999 to 99999

(the setting range varies depending on the decimal point setting.)

※Only appears in PV transmission output models.

※Only appears in RS485 comm. output models.

## ■ Operation Mode by Parameter Groups

(●: parameter display, X: no parameter display)

Operation mode		F1	F2	F3	F4	F5	F6	F7	F8	F9	F10	F11	F12	F13	F14	F15	F16	
0 group	<i>PSLHH</i> ※1	Appears in all operation modes (F1 to F16).																
	<i>PSLH</i> ※2	Appears in all operation modes (F1 to F16).																
	<i>PSL</i> ※2	Appears in all operation modes (F1 to F16).																
	<i>PSLL</i> ※1	Appears in all operation modes (F1 to F16).																
	<i>HPEL</i>	●	●	●	●	●	●	●	●	●	●	●	●	X	●	●	X	
	<i>LPEL</i>	●	●	●	●	●	●	●	●	●	●	●	●	X	●	●	X	
1 group	<i>naDE</i>	Appears in all operation mode (F1 to F16).																
	<i>ln-R</i>	Appears in all operation mode (F1 to F16).																
	<i>ln-b</i>	X	●	X	X	X	●	●	●	●	●	●	●	●	●	X	●	●
	<i>out-t</i> ※2	●	●	●	●	●	●	●	●	●	●	●	●	X	●	●	●	●
	<i>HYS</i> ※2	●	X	X	X	X	X	●	●	●	●	●	X	X	X	X	X	X
	<i>GuARD</i> ※2	●	●	●	●	●	●	●	●	●	●	●	●	X	X	X	X	X
	<i>Aut-aR</i>	●	X	X	●	X	X	●	●	●	●	●	X	X	X	X	X	X
	<i>Aut-ab</i>	X	X	X	X	X	X	●	●	●	●	●	X	X	X	X	X	X
	<i>ne-no</i>	X	X	X	X	X	X	X	X	X	X	X	X	●	●	●	●	
2 group	<i>PbARNL</i>	※Only appears in MP5W. Appears in all operation modes (F1 to F16).																
	<i>dot</i>	●	●	X	X	X	X	●	●	●	●	●	●	●	●	●	●	●
	<i>tUnb</i>	X	X	●	●	●	●	X	X	X	X	X	X	X	X	X	X	X
	<i>PSLHH</i> ※1	Appears in all operation modes (F1 to F16).																
	<i>PSLH</i> ※2	Appears in all operation modes (F1 to F16).																
	<i>PSLL</i> ※2	Appears in all operation modes (F1 to F16).																
	<i>PSL</i> ※1	Appears in all operation modes (F1 to F16).																
		<i>PSCRH</i>	●	●	X	●	X	X	●	●	●	●	●	●	●	●	●	●
		<i>PSCRY</i>	●	●	X	●	X	X	●	●	●	●	●	●	●	●	●	●
		<i>PSCbH</i>	X	X	X	X	X	X	●	●	●	●	X	X	X	X	X	X
		<i>PSCbY</i>	X	X	X	X	X	X	●	●	●	●	X	X	X	X	X	X
		<i>dSPt</i>	●	■	X	X	X	X	●	●	●	●	X	X	X	X	X	■
	<i>CoUnb</i>	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	●	
3 group	<i>FS-H</i>	※Only appears in PV transmission output models. Appears in operation modes (F1 to F16).																
	<i>FS-L</i>	※Only appears in PV transmission output models. Appears in operation modes (F1 to F16).																
	<i>naR</i>	※Only appears in PV transmission output models. Appears in operation modes (F1 to F16).																
	<i>Addr</i>	※Only appears in PV transmission output models. Appears in operation modes (F1 to F16).																
	<i>bPS</i>	※Only appears in PV transmission output models. Appears in operation modes (F1 to F16).																
	<i>Prty</i>	※Only appears in RS485 comm. output models. Appears in all operation modes (F1 to F16).																
	<i>StP</i>	※Only appears in RS485 comm. output models. Appears in all operation modes (F1 to F16).																
	<i>rEULt</i>	※Only appears in RS485 comm. output models. Appears in all operation modes (F1 to F16).																
		<i>CoULt</i>	※Only appears in RS485 comm. output models. Appears in all operation modes (F1 to F16).															
	<i>LoC</i>	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	

- ※1: Only appears in only for quintuple output models.
- ※2: Only appears in triple, quintuple output models.
- ※3: The settings for *ln-b* and *ln-R* are applied.
- ※4: (●) F output mode [*out-F*] cannot be set.
- ※5: (■) setting range: *oFF, 0.05, 0.5, 1, 2, 4, 8*

### ● Monitoring delay function by output mode

Output mode	S mode	H mode	L mode	B mode	I mode	F mode
Parameter	<i>StARN-d</i>	<i>out-h</i>	<i>out-L</i>	<i>out-b</i>	<i>out-I</i>	<i>out-F</i>
Comparative output limit	●	X	X	●	X	●
Start compensation timer	●	●	●	●	●	●

(A) Photoelectric Sensors
(B) Fiber Optic Sensors
(C) Door/Area Sensors
(D) Proximity Sensors
(E) Pressure Sensors
(F) Rotary Encoders
(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/Sockets
(H) Temperature Controllers
(I) SSRs / Power Controllers
(J) Counters
(K) Timers
(L) Panel Meters
(M) Tacho / Speed / Pulse Meters
(N) Display Units
(O) Sensor Controllers
(P) Switching Mode Power Supplies
(Q) Stepper Motors & Drivers & Controllers
(R) Graphic/ Logic Panels
(S) Field Network Devices
(T) Software

# MP5S/MP5Y/MP5W Series

## ■ Operation Modes [r o d E]

- Select operation mode from operation mode[r o d E] of parameter 1 group..
- MP5 has 16 operation modes.

### ○ F1 Mode: Frequency/Revolutions/Speed

Measures the frequency of input A and displays the calculated frequency, revolutions, and speed.


1) Frequency (Hz)	= $f \times \alpha$	( $\alpha = 1[\text{sec}]$ )
2) Revolutions (rpm)	= $f \times \alpha$	( $\alpha = 60[\text{sec}]$ )
3) Speed (m/min)	= $f \times \alpha$	( $\alpha = 60L[\text{sec}]$ )

※L: travel distance of conveyor belt of 1 pulse cycle[m]  
 $\alpha$ : prescale value


For multiple objects,  $\alpha = \frac{60L}{N}$

#### • Display value and display unit

Display value	Display unit	$\alpha$ (prescale value)
Frequency	Hz	1
	kHz	0.001
Revolutions	rps	1
	rpm (default)	60
Speed	mm/sec	1,000L
	cm/sec	100L
	m/sec	1L
	m/min	60L
	km/hour	3.6L

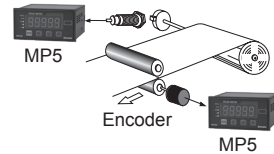

#### • Timing chart

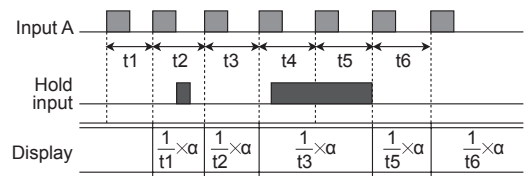

### ○ F2 Mode: Passing Speed

Displays the passing speed between input A ON and input B ON.


Passing speed (V) =  $f \times \alpha$  ( $\alpha = L[\text{m}]$ )

※f: reciprocal of time [sec] between input A (sensor) ON and input B (sensor) ON.


L: distance between input A (sensor) and input B (sensor) [m]  
 $\alpha$ : prescale value

#### • Display value and display unit

Display value	Display unit	$\alpha$ (prescale value)
Passing speed	mm/sec	1,000L
	cm/sec	100L
	m/sec (default)	1L
	m/min	60L
	km/hour	3.6L

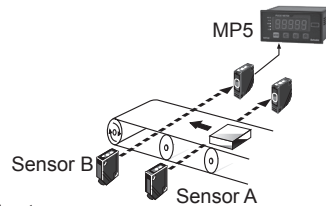

#### • Timing chart

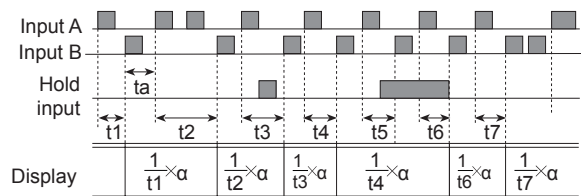

※ta: Return time (over 20ms)


### ○ F3 Mode: Cycle

Displays the measured time from Input A ON to the next ON.


Cycle (T) = t ※t: measurement time[sec]

#### • Display value and display unit ([t.u.n.t.] of parameter 2)

Display value	Display unit	
Cycle	Sec	Min
	999.99s (default)	999.99m
	9999.9s	9999.9m
	99m59.9s	99h59.9m
	9h59m59s	999h59m
	99999s	99999m

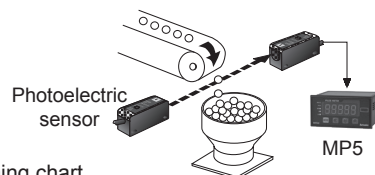

#### • Timing chart

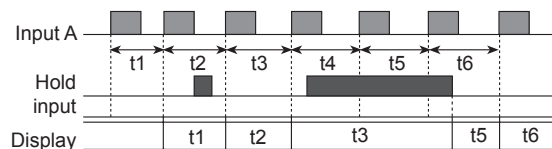

## ◎ F4 Mode: Passing Time

Measures the time from Input A ON to the next ON, and displays the passing time of the arbitrary distance.


$$\text{Passing time[sec]} = t \times \alpha$$

$$\left( \alpha = \frac{L[\text{m}]}{\text{Distance advanced in 1 pulse cycle [m]}} \right)$$


※t : measured time[sec], L : arbitrary distance[m]  
 α : prescale value

- Display value and display unit ([E.U.N.E.] of parameter 2)

Display value	Display unit	
Passing time	SEC	MIN
	999.99s (default)	999.99m
	9999.9s	9999.9m
	99m59.9s	99h59.9m
	9h59m59s	999h59m
	99999s	99999m

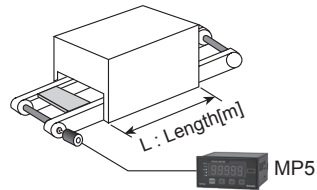

### • Timing chart

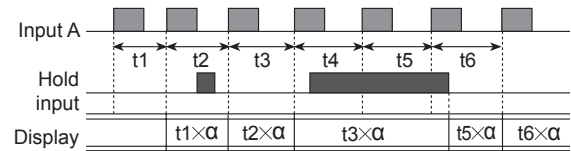

## ◎ F5 Mode: Time Interval


Displays measured time of Input A ON

$$\text{Time interval (T) = t}$$


※t : measured time of input A ON [sec]

- Display value and display unit ([E.U.N.E.] of parameter 2)

Display value	Display unit	
Time interval	SEC	MIN
	999.99s (default)	999.99m
	9999.9s	9999.9m
	99m59.9s	99h59.9m
	9h59m59s	999h59m
	99999s	99999m

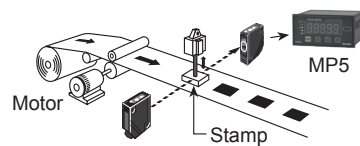

### • Timing chart

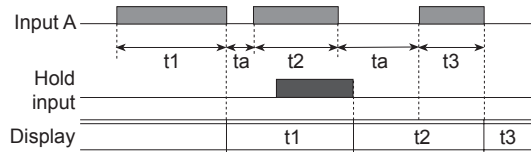

※ta: Return time (over 20ms)

## ◎ F6 Mode: Time Differential


Displays measured time from Input A ON to Input B ON.

$$\text{Time differential (T) = t (ta to tb)}$$


※t (ta to tb): measured time from input A ON to input B ON [sec]

- Display value and display unit ([E.U.N.E.] of parameter 2)

Display value	Display unit	
Time difference	SEC	MIN
	999.99s (default)	999.99m
	9999.9s	9999.9m
	99m59.9s	99h59.9m
	9h59m59s	999h59m
	99999s	99999m

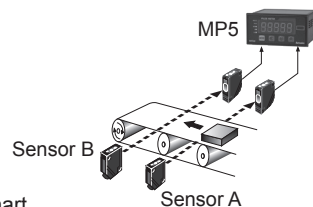

### • Timing chart

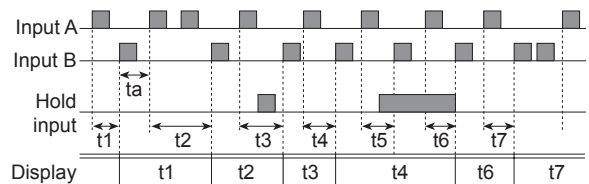

※ta: Return time (over 20ms)

(A) Photoelectric Sensors

(B) Fiber Optic Sensors

(C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure Sensors

(F) Rotary Encoders

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/Sockets

(H) Temperature Controllers

(I) SSRs / Power Controllers

(J) Counters

(K) Timers

(L) Panel Meters

(M) Tacho / Speed / Pulse Meters

(N) Display Units

(O) Sensor Controllers

(P) Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels

(S) Field Network Devices

(T) Software

# MP5S/MP5Y/MP5W Series

## ◎ F7 Mode: Absolute Ratio

Measures and displays relative speed, amount, speed, etc. of input B against input A in percentage (%).

$$\text{Absolute ratio} = \frac{\text{Input B}}{\text{Input A}} \times 100\%$$


$$\text{Absolute ratio} = \frac{\text{Frequency of input B [Hz]} \times B\alpha}{\text{Frequency of input A [Hz]} \times A\alpha} \times 100\%$$

※Aα: Prescale value of input A, Bα: Prescale value of input B


### • Display value and display unit

Display value	Display unit
Absolute ratio	%

※Hold: When the hold signal turns ON, the display value is maintained until the display cycle turns to hold OFF.

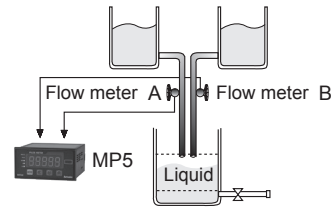

### • Timing chart

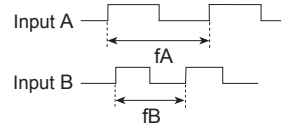

$$\text{Display} = \frac{\text{Frequency of input B [Hz]} \times B\alpha}{\text{Frequency of input A [Hz]} \times A\alpha} \times 100\%$$

## ◎ F8 Mode: Error Ratio

Measures and displays the relative rate of input B against the reference value of input A in percentage (%).

$$\text{Error ratio} = \frac{\text{Input B} - \text{Input A}}{\text{Input A}} \times 100\%$$


$$\text{Error ratio} = \frac{(\text{Frequency of input B [Hz]} \times B\alpha) - (\text{Frequency of input A [Hz]} \times A\alpha)}{\text{Frequency of input A [Hz]} \times A\alpha} \times 100\%$$

※Aα: prescale value of input A, Bα: prescale value of input B


### • Display value and display unit

Display value	Display unit
Error ratio	%

※Hold: When the hold signal turns ON, the display value is maintained until the display cycle turns to hold OFF.

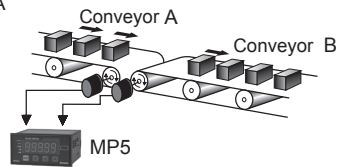

### • Timing chart

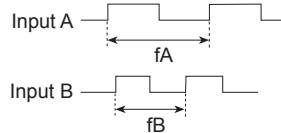

## ◎ F9 Mode: Density

Measures and displays the density ratio (%) of input B against the total sum of input A and input B.

$$\text{Density} = \frac{\text{Input B}}{\text{Input A} + \text{Input B}} \times 100\%$$


$$\text{Density} = \frac{\text{Frequency of Input B [Hz]} \times B\alpha}{(\text{Frequency of input A [Hz]} \times A\alpha) + (\text{Frequency of input B [Hz]} \times B\alpha)} \times 100\%$$

※Aα: Prescale value of input A, Bα: Prescale value of input B


### • Display value and display unit

Display value	Display unit
Density	%

※Hold: When the hold signal turns ON, the display value is maintained until the display cycle turns to hold OFF.

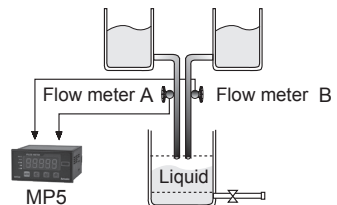

### • Timing chart

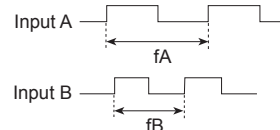

## ◎ F10 Mode: Error

Measures and displays the error of input B against reference value of input A.

$$\text{Error} = \text{Input B} - \text{Input A}$$


$$\text{Error} = (\text{Frequency of input B [Hz]} \times B\alpha) - (\text{Frequency of input A [Hz]} \times A\alpha)$$

※Aα: prescale value of input A, Bα: prescale value of input B


### • Display value and display unit

Display value	Display unit
Error	END User setting

※Hold: When the hold signal turns ON, the display value is maintained until the display cycle turns to hold OFF.

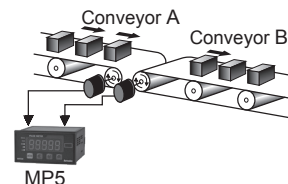

### • Timing chart

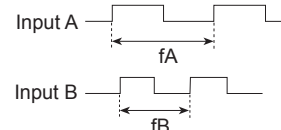



## ◎ F11 Mode: Length Measurement 1

Measure and display the number of input A pulses during input B ON.

$$\text{Length measurement} = P \times \alpha$$

※P: Number of input A pulses,  $\alpha$ : Prescale value

### • Display value and display unit

Display value	Display unit
Length measurement	Quantity (default)
	mm
	cm
	m

## ◎ F12 Mode: Interval

Measures and displays the number of input A pulses from Input B ON to the next ON.

$$\text{Interval} = P \times \alpha$$

※P: Number of input A pulses,  $\alpha$ : Prescale value

### • Display value and display unit

Display value	Display unit
Interval	Quantity (default)
	mm
	cm
	m

## ◎ F13 Mode: Accumulation

Measures and displays the counted value of input A pulses.

$$\text{Accumulation} = P \times \alpha$$


※P: Number of input A pulses,  $\alpha$ : Prescale value

### • Display value and display unit


Display value	Display unit
Accumulation	Quantity[EA]

### • Operation


- ① Counts the number of input A pulses.
- ② Input B is an enable input signal. During ON, the quantity and display value of input A will be held, and during OFF input A will be re-counted.
- ③ When RESET input is ON, the integrated counted value will be reset to "0".

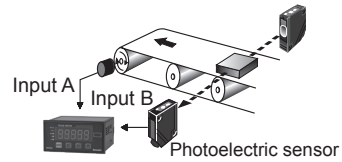


### • Timing chart MP5

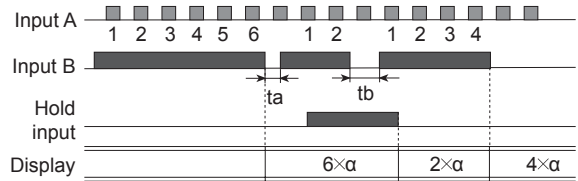


※ta, tb: return time (over 20ms)

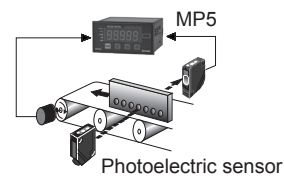


### • Timing chart

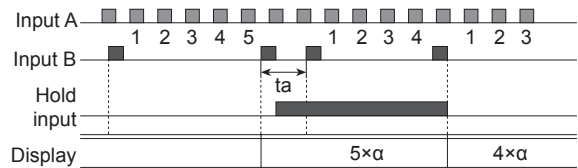

※ta: return time (over 20ms)

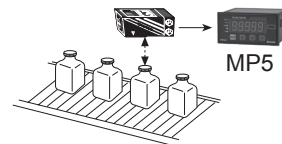

### • Timing chart

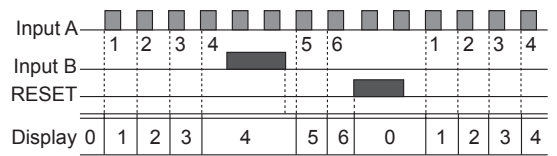

※α=1 display value

(A) Photoelectric Sensors

(B) Fiber Optic Sensors

(C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure Sensors

(F) Rotary Encoders

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/Sockets

(H) Temperature Controllers

(I) SSRs / Power Controllers

(J) Counters

(K) Timers

(L) Panel Meters

(M) Tacho / Speed / Pulse Meters

(N) Display Units

(O) Sensor Controllers

(P) Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels

(S) Field Network Devices

(T) Software

# MP5S/MP5Y/MP5W Series

## ○ F14 Mode: Addition/Subtraction-Individual Input

Displays the counted value from added input A pulses and subtracted input B pulses. When there are two inputs simultaneously, it will not count.

$$\text{Addition/Subtraction} = \text{Input A} \times \alpha - \text{Input B} \times \beta$$


※ $\alpha$ : Prescale value of input A,  $\beta$ : Prescale value of input B

### • Display value and display unit


Display value	Display unit
Addition/ Subtraction (individual input)	Quantity

### • Operation and timing chart

Pulse of input A is added, and pulse of input B is subtracted.

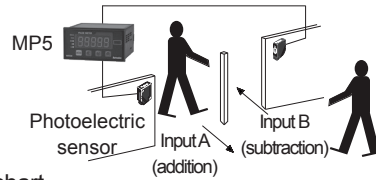

### • Timing chart

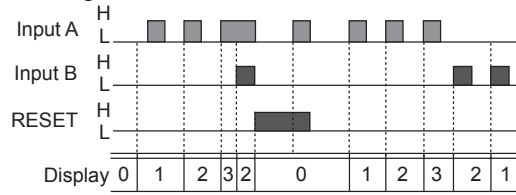

※ $\alpha, \beta=1$  display value


## ○ F15 Mode: Addition/Subtraction- Phase difference input

When input A is low, counting is added to the low of input B. When input A is low, counting is subtracted from the high of input B.


Addition/Subtraction (phase difference)  
= Detects position and speed using A and B phases of encoder outputs as input.

### • Display value and display unit

Display value	Display unit
Up/Down counting (phase difference input)	Quantity

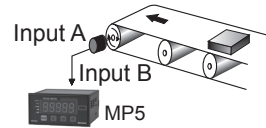

### • Timing chart

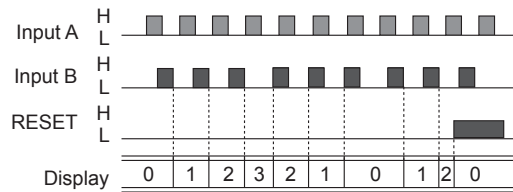

## ○ F16 Mode: Length Measurement 2

Measures and displays the number of pulses from input A until the value of input B reaches the set value.

$$\text{Length measurement 2} = P \times \alpha \text{ (until the setting value of Input B)}$$

※P: Number of input A pulses,  $\alpha$ : Prescale value


### • Display value and display unit

Display value	Display unit
Length measurement 2	Quantity[EA]

※If input A and input B are ON during initial power supply, it will not count and only count the number of rising edge.

※Display value is renewed depending on the display cycle [ $d^1$  5P $\epsilon$ ] setting.

### • Timing chart (e.g.) setting value of Input B=4

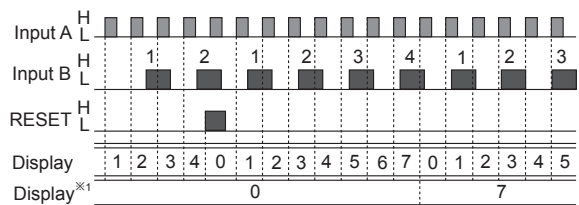


※1: When the display cycle [ $d^1$  5P $\epsilon$ ] setting is  $\alpha FF$ , it will maintain the quantity of input A until the value of input B reaches the setting value B [ $C \alpha U n b$ ].

## Output Modes [出力モード]


- MP5 Series supports 6 output modes. (There is no output mode in indicator models).
- Requirement for setting comparative value: (B output mode)  $LL < L < H < HH$ , (F output mode)  $L < H$ , (other output modes) individual output operation regardless of size or order of set comparative values.

### Standard Output Mode [標準出力モード]

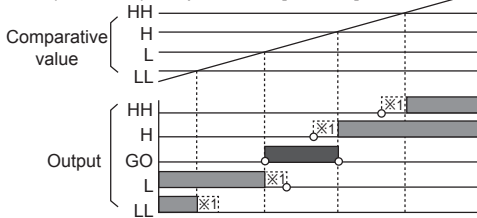


- HH output : Display value  $\geq$  Comparative setting value HH
- H output : Display value  $\geq$  Comparative setting value H
- L output : Display value  $\leq$  Comparative setting value L
- LL output : Display value  $\leq$  Comparative setting value LL
- ※GO output ON when there are no HH, H, L, LL outputs

### High Output Mode [高出力モード]

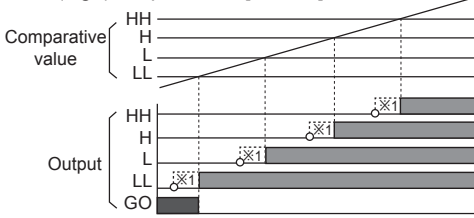


- HH output : Display value  $\geq$  Comparative setting value HH
- H output : Display value  $\geq$  Comparative setting value H
- L output : Display value  $\geq$  Comparative setting value L
- LL output : Display value  $\geq$  Comparative setting value LL
- ※GO output ON when there are no HH, H, L, LL outputs

### Low Output Mode [低出力モード]

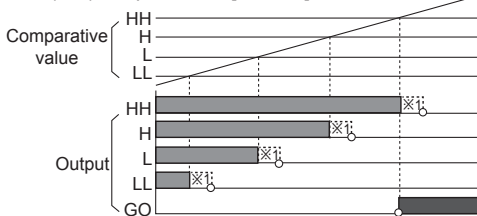


- HH output : Display value  $\leq$  Comparative setting value HH
- H output : Display value  $\leq$  Comparative setting value H
- L output : Display value  $\leq$  Comparative setting value L
- LL output : Display value  $\leq$  Comparative setting value LL
- ※GO output ON when there are no HH, H, L, LL outputs

### Block Output Mode [ブロック出力モード]

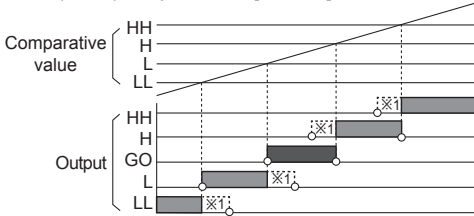

- HH output : Display value  $\geq$  Comparative setting value HH
- H output : Comparative setting value HH  $>$  Display value  $\geq$  Comparative setting value H
- L output : Comparative setting value LL  $<$  Display value  $\leq$  Comparative setting value L
- LL output : Display value  $\leq$  Comparative setting value LL
- ※GO output ON when there are no HH, H, L, LL outputs

### One-shot Output Mode [ワンショット出力モード]

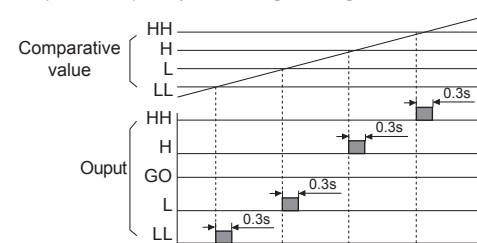


- HH output : Display value  $\geq$  Comparative setting value HH
- H output : Comparative setting value HH  $>$  Display value  $\geq$  Comparative setting value H
- L output : Comparative setting value H  $>$  Display value  $\geq$  Comparative setting value L
- LL output : Comparative setting value L  $>$  Display value  $\geq$  Comparative setting value LL
- ※No GO output
- ※One-shot output time is fixed at 0.3 sec.
- ※No hysteresis

### Deflection Output Mode [反転出力モード]

- Transmits outputs when the saved setting value exceeds H deviation or L deviation.
- Saving setting value: press the **MODE+H** keys to save as setting value.
- Checking setting value: press the **H** key to check the setting value.
- Setting deviation: Sets H deviation [P5t. H], and L deviation [P5t. L] of parameter group 0,2 with the setting value as reference. (The set deviation value is saved during Power OFF until it is re-set.)
- Deviation setting range: 0.0001 to 99999 (the setting range varies depending on the decimal point [dot] setting.)

E.g.) Decimal point [dot]: 0000.0, Setting range: 0.1 to 9999.9

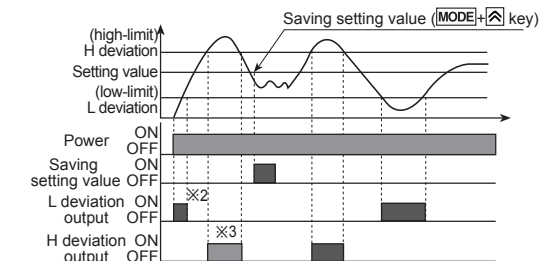

- ※2: When selecting initial comparative output limit function, it does not transmit outputs.
- ※3: The graph is assuming that there is a saved setting value prior to the setting value save point. The actual output position may be different.
- ※There are no HH, GO, LL outputs.
- ※The deviation can be set to "0" but the actual operation will be the same as "1".

(A) Photoelectric Sensors
(B) Fiber Optic Sensors
(C) Door/Area Sensors
(D) Proximity Sensors
(E) Pressure Sensors
(F) Rotary Encoders
(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/Sockets
(H) Temperature Controllers
(I) SSRs / Power Controllers
(J) Counters
(K) Timers
(L) Panel Meters
(M) Tacho / Speed / Pulse Meters
(N) Display Units
(O) Sensor Controllers
(P) Switching Mode Power Supplies
(Q) Stepper Motors & Drivers & Controllers
(R) Graphic/ Logic Panels
(S) Field Network Devices
(T) Software

# MP5S/MP5Y/MP5W Series


## Function

### Hysteresis [HYS]

Near the comparative setting value, the output may turn ON/OFF frequently and unstably. To prevent this, hysteresis value is set based on the comparative setting value.

※A: hysteresis value

※The hysteresis value can be set to "0" but the actual operation value is "1".

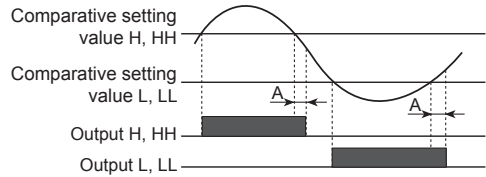

### Delay monitoring [GURD]

After supplying power, the starting current of motors and other inputs are changeable. This function allows stable control by limiting all outputs for a certain period of time, until the target measurement unit stabilizes. It may also control L, LL outputs until a specific output is reached.


#### Comparative output limit function [DEFY]

: Only for S (Standard), B (Block), F (Deflection) output mode.

: Limits L, LL output before H, HH output.

※Initial L, LL outputs does not operate, so GO output operates.


#### 1) During S (Standard) output mode

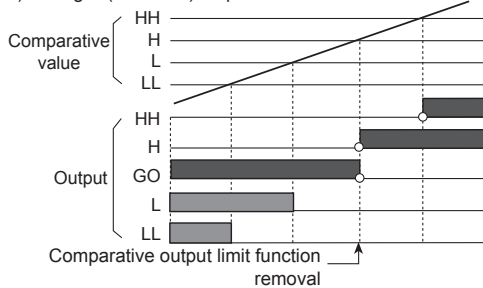


※After supplying power, there is no initial L, LL comparative outputs ( ).

※Each setting value of HH, H, LL, L is not related to their relative sizes. Hence, HH value may be lower or equal to LL value.

#### 2) During B (Block) output mode

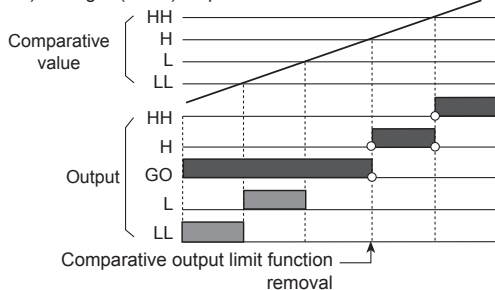

#### 3) During F (Deflection) output mode

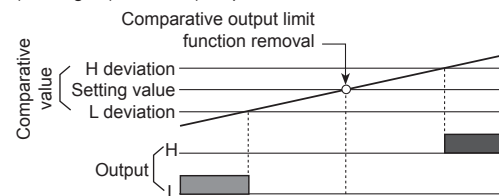

※After supplying power, there is no comparative output ( ) of L deviation.


※In F output mode, the comparative output limiting function is removed at the set value (standard setting)

※H and L deviation are not related to their relative sizes.

(H deviation setting value > L deviation setting value, H deviation setting value < L deviation setting value)

### Start compensation timer function [START]

Set monitoring delay time so that there is no output during the delay time.

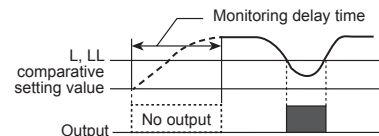

### Auto-zero time setting [AUTOA, AUTOB]

When there is no input signal during auto-zero setting time, the display value is automatically set to 0 (zero). Please set the auto-zero setting time so that it is longer than the interval of the slowest input signal. If the setting time is too long and there is no input signal, the rate at which the display value falls to 0 (zero) decrease, and output response rate may slow down.

### Data bank [PBAH] (only for MP5W)


Comparative setting value and prescale value are saved as two types (data bank 1, 2) and can be selected for use by opening or shorting of terminals.

• Terminal 3, 5 open: use value of data bank 1

• Terminal 3, 5 short: use value of data bank 2

### Prescale [PSCOH, PSCOH]

Displays values in required units or specific multiples by counting the number of input pulses, then multiplying the number of pulses or the length of pulses by variables (X×10y).



$$\text{Number of revolutions (rpm)} = f \times \alpha$$

$$= f \times 60 \times (1 / N)$$

$$= f \times 60 \times (1 / 4)$$

$$= f \times 60 \times 0.25$$

$$= f \times 15$$

※f: The number of input pulses per second[Hz].

α: Prescale value

N: The number of pulses per revolution

• Setting prescale value (α=15)

Set mantissa (X) as 1.5000, and exponent (Y) as 1 for prescale value (α)=15.

The same display value can be obtained with α value set as X=0.1500, and Y=2.


## ■ RS485 Communication Output

- Applicable for models with RS485 communication output through sub output (MP5Y□5, MP5W□8/9). Please refer to 'Ordering Information'.

### 1. Communication specifications

Comm. protocol	Modbus RTU	Communication Speed	2400, 4800, 9600 (default), 19200, 38400 bps
Connection type	RS485	Communication response time	5 to 99ms (default: 20ms)
Application standard	Compliance with EIA RS485	Start Bit	1-bit fixed
Max. connection	31 units (address: 01 to 99)	Data Bit	8-bit fixed
Synchronous method	Asynchronous	Parity Bit	None (default), Even, Odd
Comm. method	Two-wire half duplex	Stop Bit	1, 2-bit (default)
Comm. distance	Max. 800m		


### 2. System configuration

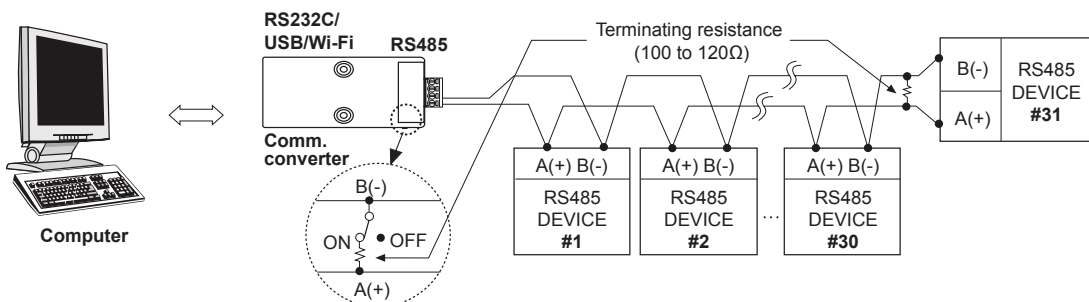

※ It is recommended to use Autonics communication converter; SCM-WF48 (Wi-Fi to RS485-USB wireless communication converter, sold separately), SCM-US48I (USB to RS485 converter, sold separately), SCM-38I (RS232C to RS485 converter, sold separately). Please use twisted pair wire for RS485 communication.

### 3. Communication control sequence

- Communication sequence follows Modbus RTU protocol.
- Communication with the host system can be established after 1sec (1,000ms) of supplying power.
- The initial transmission authority is held by the host device (PC). When the host device transmits a request, the MP5W/Y Series sends a response.

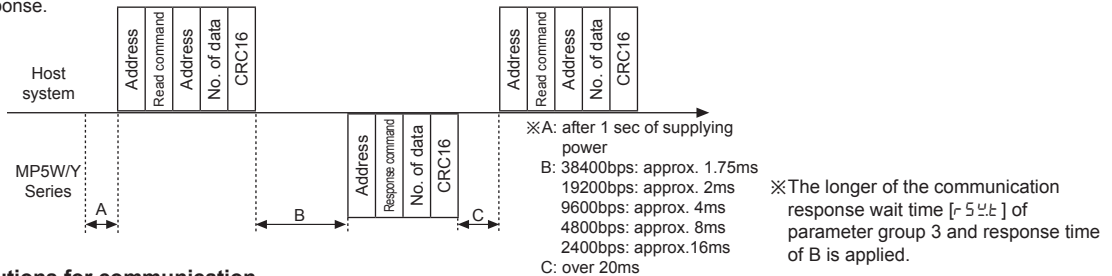

### 4. Cautions for communication

- Twisted pair cable (AWG24) is recommended for RS485 communication. When not using twisted pair cables, please make sure that A (+) and B (-) cable lengths are equal.
- After connecting the communication cable, terminating resistors (100 to 120Ω) must be attached at both ends.

### 5. Communication command and block definition

#### 5-1. read coil status (func. 01 H), read input status (func. 02 H)

1) Query (Master)

Slave Address	Function (command)	Starting Address		No. of Points (no. of data)		Error Check (CRC 16)	
		High	Low	High	Low	Low	High
1Byte	1Byte	1Byte	1Byte	1Byte	1Byte	1Byte	1Byte

CRC16

2) Response (slave)

Slave Address	Function (command)	Byte Count (no. of data byte)	Data (low)	Data	Data (high)	Error Check (CRC 16)	
						Low	High
1Byte	1Byte	1Byte	1Byte	1Byte	1Byte	1Byte	1Byte

CRC16

#### 5-2. Read Holding registers (func. 03 H), read input registers (func. 04 H)

1) Query (Master)

Slave Address	Function (command)	Starting Address		No. of Points (no. of data)		Error Check (CRC 16)	
		High	Low	High	Low	Low	High
1Byte	1Byte	1Byte	1Byte	1Byte	1Byte	1Byte	1Byte

CRC16

(A) Photoelectric Sensors

(B) Fiber Optic Sensors

(C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure Sensors

(F) Rotary Encoders

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/Sockets

(H) Temperature Controllers

(I) SSRs / Power Controllers

(J) Counters

(K) Timers

(L) Panel Meters

(M) Tacho / Speed / Pulse Meters

(N) Display Units

(O) Sensor Controllers

(P) Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels

(S) Field Network Devices

(T) Software

# MP5S/MP5Y/MP5W Series

## 2) Response (Slave)

Slave Address	Function (command)	Byte Count (no. of data byte)	Data		Data		Data		Error Check (CRC 16)	
			High	Low	High	Low	High	Low	Low	High
1Byte	1Byte	1Byte	1Byte	1Byte	1Byte	1Byte	1Byte	1Byte	1Byte	1Byte

← CRC16 →

## 5-3. Force single coil (func. 05 H)

### 1) Query (Master)

Slave Address	Function (command)	Coil Address		Force Data		Error Check (CRC 16)	
		High	Low	High	Low	Low	High
1Byte	1Byte	1Byte	1Byte	1Byte	1Byte	1Byte	1Byte

← CRC16 →

### 2) Response (Slave)

Slave Address	Function (command)	Coil Address		Force Data		Error Check (CRC 16)	
		High	Low	High	Low	Low	High
1Byte	1Byte	1Byte	1Byte	1Byte	1Byte	1Byte	1Byte

← CRC16 →

## 5-4. Preset single register (func. 06 H)

### 1) Query (Master)

Slave Address	Function (command)	Register Address		Preset Data		Error Check (CRC 16)	
		High	Low	High	Low	Low	High
1Byte	1Byte	1Byte	1Byte	1Byte	1Byte	1Byte	1Byte

← CRC16 →

### 2) Response (Slave)

Slave Address	Function (command)	Register Address		Preset Data		Error Check (CRC 16)	
		High	Low	High	Low	Low	High
1Byte	1Byte	1Byte	1Byte	1Byte	1Byte	1Byte	1Byte

← CRC16 →

## 5-5. Preset multiple registers (func. 10 H)

### 1) Query (Master)

Slave Address	Function (command)	Starting Address		No. of Register		Byte Count	Data		Data		Error Check (CRC 16)	
		High	Low	High	Low		High	Low	High	Low	High	
1Byte	1Byte	1Byte	1Byte	1Byte	1Byte	1Byte	1Byte	1Byte	1Byte	1Byte	1Byte	1Byte

← CRC16 →

### 2) Response (Slave)

Slave Address	Function (command)	Starting Address		No. of Register		Error Check (CRC 16)	
		High	Low	High	Low	Low	High
1Byte	1Byte	1Byte	1Byte	1Byte	1Byte	1Byte	1Byte

← CRC16 →

## 5-6. Exception response-error code (exception processing)

Slave Address	Function +80H	Exception code	Error Check (CRC 16)	
			Low	High
1Byte	1Byte	1Byte	1Byte	1Byte

← CRC16 →

• When a communication error occurs, the highest bit from the received command (function) is set (1), a response command is sent, and the corresponding exception code is transmitted.

- (1) ILLEGAL FUNCTION (exception code: 01 H)  
: Unsupported command
- (2) ILLEGAL DATA ADDRESS (exception code: 02 H)  
: The requested start address does not match the transmission address of the device.
- (3) ILLEGAL DATA VALUE (exception code: 03 H)  
: The number of requested data does not match the transmission number of the device.
- (4) SLAVE DEVICE FAILURE (exception code: 04 H)  
: The requested command cannot be processed properly. (CRC)

## 6. Address mapping table

### 6-1. Read coil status (func. 01) / Force single coil (func. 05)

No.(Address)	Func	R/W	Parameter	Description	Setting range	Note
000001(0000)	01	R/W	HH	HH comparative output	0: OFF / 1: ON	
000002(0001)	01	R/W	H	H comparative output	0: OFF / 1: ON	
000003(0002)	01	R/W	GO	GO comparative output	0: OFF / 1: ON	
000004(0003)	01	R/W	L	L comparative output	0: OFF / 1: ON	
000005(0004)	01	R/W	LL	LL comparative output	0: OFF / 1: ON	
000006(0005)	01	R/W			0: OFF / 1: ON	
000007(0006)	01	R/W			0: OFF / 1: ON	
000008 to 000050	01	R/W			0: OFF / 1: ON	

### 6-2. Read input status (func. 02)

No.(Address)	Func	R/W	Parameter	Description	Setting range	Note
100001(0000)	02	R		RESET(HOLD)	External input	RESET input status
100002(0001)	02	R		BANK	variables	BANK input status
100003(0002)	02	R				0: OFF / 1: ON
100004(0003)	02	R				0: OFF / 1: ON
100005(0004)	02	R				0: OFF / 1: ON
100006(0005)	02	R				0: OFF / 1: ON
100007(0008)	02	R				0: OFF / 1: ON
100008(0007)	02	R				0: OFF / 1: ON
100009(0008)	02	R				0: OFF / 1: ON
100010(0009)	02	R				0: OFF / 1: ON
100011(000A)	02	R				0: OFF / 1: ON
100012 to 100050	02	R				0: OFF / 1: ON

### 6-3. Read input registers (func. 04)

No.(Address)	Func	R/W	Parameter	Description	Factory default	Note
300001 to 300100	04	R		Reserved		
300101(0064)	04	R		Product number H	0	Dedicated model number
300102(0065)	04	R		Product number L	0	
300103(0066)	04	R		Hardware Version	1	
300104(0067)	04	R		Software Version	1	
300105(0068)	04	R		Model 1	"MP"	
300106(0069)	04	R		Model 2	"5□"	
300107(006A)	04	R		Model 3	"□"	
300108(006B)	04	R		Model 4	"□"	MP5□□5, MP5W□□8 (※MP5W□□9 displayed as MP5W□□8)
300109(006C)	04	R		Model 5	" "	
300110(006D)	04	R		Model 6	" "	
300111(006E)	04	R		Model 7	" "	
300112(006F)	04	R		Model 8	" "	
300113(0070)	04	R		Model 9	" "	
300114(0071)	04	R		Model 10	" "	
300115(0072)	04	R		Reserved		
300116(0073)	04	R		Reserved		
300117(0074)	04	R		Reserved		
300118(0075)	04	R		Coil Status Start Address	0000	
300119(0076)	04	R		Coil Status Quantity	0	
300120(0077)	04	R		Input Status Start Address	0000	
300121(0078)	04	R		Input Status Quantity	0	
300122(0079)	04	R		Holding Register Start Address	0000	
300123(007A)	04	R		Holding Register Quantity	0	
300124(007B)	04	R		Input Register Start Address	0000	
300125(007C)	04	R		Input Register Quantity	0	
300126 to 300200	04	R		Reserved		
No.(Address)	Func	R/W	Parameter	Description	Setting range	Note
301001(03E8)	04	R	HH H GO L LL	HH LED Display H LED Display GO LED Display L LED Display LL LED Display	0: OFF 1: ON 0: OFF 1: ON 0: OFF 1: ON 0: OFF 1: ON 0: OFF 1: ON	0 Bit 1 Bit 2 Bit 3 Bit 4 Bit
301002(03E9) 301003(03EA)	04	R	PV	Measurement value	-19999 to 99999	
301004(03EB)	04	R	DOT		0: 00000 3: 00000 1: 00000 4: 00000 2: 00000	
301005(03EC)	04	R	UNIT		0: 999.99s 5: 999.99m 1: 9999.9s 6: 9999.9m 2: 99m59.9s 7: 99h59.9m 3: 9h59m59s 8: 999h59m 4: 99999s 9: 99999m	
301006(03ED)	04	R	MODE	Operation mode	0: F1 to 1: F2 14: F15 2: F3 15: F16	
301007(03EE)	04	R				

(A) Photoelectric Sensors

(B) Fiber Optic Sensors

(C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure Sensors

(F) Rotary Encoders

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/Sockets

(H) Temperature Controllers

(I) SSRs / Power Controllers

(J) Counters

(K) Timers

(L) Panel Meters

(M) Tacho / Speed / Pulse Meters

(N) Display Units

(O) Sensor Controllers

(P) Switching Mode Power Supplies

(Q) Stepper Motors &amp; Drivers &amp; Controllers

(R) Graphic/ Logic Panels

(S) Field Network Devices

(T) Software

# MP5S/MP5Y/MP5W Series

## 6-4. Read holding registers (func. 03) / Preset single register (func. 06) / Preset multiple registers (func. 16)

### 6-4-1. Comparative value settings and peak value check group

No.(Address)	Func	R/W	Parameter	Description	Setting range	Factory default
400001(0000)	03/16	R/W	$P5t.HH$	Preset HH	HH comparative value	0 to 99999
400002(0001)						
400003(0002)	03/16	R/W	$P5t.H$	Preset H	H comparative value	0 to 99999
400004(0003)						
400005(0004)	03/16	R/W	$P5t.L$	Preset L	L comparative value	0 to 99999 <sup>*1</sup>
400006(0005)						
400007(0006)	03/16	R/W	$P5t.LL$	Preset LL	LL comparative value	0 to 99999 <sup>*1</sup>
400008(0007)						
400009(0008)	03/16	R/W	$HPEt$	High Peak	High peak value of measured value	99999 <sup>*2</sup>
400010(0009)						
400011(000A)	03/16	R/W	$LPEt$	Low Peak	Low peak value of measured value	-19999 <sup>*2</sup>
400012(000B)						
400013 to 400050	03/06/16	R/W	Reserved			

\*1: In operation modes F8, F10, F14, F15, the setting range is -19999 to 99999

\*2: Max./Min. measurement value

### 6-4-2. Parameter 1 group

No.(Address)	Func	R/W	Parameter	Description	Setting range	Factory default
400051(0032)	03/06/16	R/W	$\tilde{n}odE$	Mode	Input operation mode 0: F1 to 14: F15 1: F2 14: F15 2: F3 15: F16	0
400052(0033)	03/06/16	R/W	$i n - A$	Input A	Sensor type 0: $n P n H F$ 1: $n P n \bar{n} F$ 2: $n P n L F$ 3: $P n P H F$ 4: $P n P \bar{n} F$ 5: $P n P L F$	0
400053(0034)	03/06/16	R/W	$i n - B$	Input B		
400054(0035)	03/06/16	R/W	$oUt - t$	Output type	Output mode 0: $5tAr d$ 1: $oUt - H$ 2: $oUt - L$ 3: $oUt - b$ 4: $oUt - i$ 5: $oUt - F$	0
400055(0036)	03/06/16	R/W	$HYS$	Hysteresis	Hysteresis value	1 to 9999
400056(0037)	03/06/16	R/W	$GUAr d$	Output limit	Output limit function 0: $F d E F Y$ 1: $5tAr t$	0
400057(0038)	03/06/16	R/W	$5tAr t$	Start limit value	Start compensation timer value	0.0 to 99.9
400058(0039)	03/16	R/W	$AUt o A$	Auto-zero A	Auto-zero time	0.1 to 9999.9
400059(003A)	03/16	R/W				
400060(003B)	03/16	R/W				
400061(003C)	03/16	R/W				
400062(003D)	03/06/16	R/W	$\tilde{n}E\tilde{n}o$	Memory	Memory retention	0: $oFF$ 1: $o n$
400063 to 400100	03/06/16	R/W	Reserved			

### 6-4-3. Parameter 2 group

No.(Address)	Func	R/W	Parameter	Description	Setting range	Factory default
400101(0064)	03/06/16	R/W	$PbAn t$	Data bank	Data bank 0: $i$ 1: $e$	0
400102(0065)	03/06/16	R/W	$dot$	Dot	Decimal point 0: $00000$ 1: $00000$ 2: $00000$ 3: $00000$ 4: $00000$	0
400103(0066)	03/06/16	R/W	$tUn t$	Time unit	Time unit 0: $tSE C$ 1: $t\tilde{n}i n$	0
400104(0067)	03/06/16	R/W	$tSE C$	Time sec	Time range 0: $999.99$ 999.99s 1: $999.99$ 9999.9s 2: $99.99$ 99m59.9s 3: $99.99$ 9h59m59s 4: $999.99$ 9999s 5: $999.99$ 999.99m 6: $999.99$ 9999.9m 7: $99.99$ 99h59.9m 8: $999.99$ 999h59m 9: $999.99$ 99999m	0



### 6-4-3. Parameter 2 group

No.(Address)	Func.	R/W	Parameter	Description	Setting range	Factory default
400105(0068)	03/16	R/W	P5t.HH	Preset HH	HH comparative value	0 to 99999
400106(0069)	03/16	R/W		Preset H	H comparative value	0 to 99999
400107(006A)	03/16	R/W	P5t.L	Preset L	L comparative value	0 to 99999 <sup>※1</sup>
400108(006B)	03/16	R/W		Preset LL	LL comparative value	0 to 99999 <sup>※1</sup>
400109(006C)	03/16	R/W	P5c.RH	Prescale A Mantissa	Prescale A mantissa	0.0001 to 9.9999
400110(006D)	03/16	R/W		Prescale A Exponent	Prescale A exponent	00 to 09: + (0 to 9) 10 to 19: - (0 to 9)
400111(006E)	03/16	R/W	P5c.bH	Prescale B Mantissa	Prescale B mantissa	0.0001 to 9.9999
400112(006F)	03/16	R/W		Prescale B Exponent	Prescale B exponent	00 to 09: + (0 to 9) 10 to 19: - (0 to 9)
400113(0070)	03/16	R/W	d! 5P.t	Display time	Display cycle	0: 0FF 4: 2 1: 005 5: 4 2: 05 6: 8 3: 1
400114(0071)	03/16	R/W		INB Setting value	Operation mode F16 INB	1 to 99999
400115(0072)	03/06/16	R/W	Reserved			
400116(0073)	03/16	R/W	c0U.n.b	INB Setting value	Operation mode F16 INB	99999
400117(0074)	03/16	R/W				
400118(0075)	03/06/16	R/W	Reserved			
400119(0076)	03/06/16	R/W	Reserved			
400120(0077)	03/16	R/W	Reserved			
400121(0078)	03/16	R/W	Reserved			
400122 to 400150	03/06/16	R/W	Reserved			

※1: In operation modes F8, F10, F14, F15, the setting range is -19999 to 99999

### 6-4-4. Parameter 3 group

No.(Address)	Func.	R/W	Parameter	Description	Setting range	Factory default
400151(0096)	03/16	R/W	F5-H	Full scale High	High-limit value of PV transmission output	Setting range varies by model and operation mode <sup>※1</sup>
400152(0097)				Full scale Low		
400153(0098)	03/16	R/W	nA	mA	Transmission output spec.	0: 4-20 (mA) 1: 0-20 (mA)
400154(0099)				Unit address	Communication address	1 to 99
400155(009A)	03/06/16	R/W	Reserved			
400156(009B)	03/06/16	R/W	bP5	Bit per Sec	Communication Speed	0: 2400 1: 4800 2: 9600 3: 19200 4: 38400
400157(009C)	03/06/16	R/W	P.r.t.y	Parity bit	Communication parity bit	0: none 1: Even 2: odd
400158(009D)	03/06/16	R/W	5.t.P	Stop bit	Communication stop bit	0: 1 1: 2
400159(009E)	03/06/16	R/W	r.5.t.t	Response waiting time	Communication response waiting time	5 to 99(ms)
400160(009F)	03/06/16	R/W	c0n.L	Communication write enable/disable	Communication write enable/disable	0: d! 5R 1: EnR
400161(00A0)	03/06/16	R/W	L.o.C	Lock	Lock	0: 0FF 1: L.o.C.0 2: L.o.C.1 3: L.o.C.2 4: L.o.C.3
400162(00A1)	03/06/16	R/W	Reserved			
400163 to 400200	03/06/16	R/W	Reserved			

※1: High-limit/low-limit setting value of PV transmission output. (varies by model and operation mode)

Series	Operation mode	Setting range
MP5Y MP5W	F1, F2, F7, F9, F11, F12, F13, F16	0 to 99999
	F3, F4, F5, F6	0.01 to set time range
	F8, F10, F14, F15	-19999 to 99999

(A)	Photoelectric Sensors
(B)	Fiber Optic Sensors
(C)	Door/Area Sensors
(D)	Proximity Sensors
(E)	Pressure Sensors
(F)	Rotary Encoders
(G)	Connectors/ Connector Cables/ Sensor Distribution Boxes/Sockets
(H)	Temperature Controllers
(I)	SSRs / Power Controllers
(J)	Counters
(K)	Timers
(L)	Panel Meters
(M)	Tacho / Speed / Pulse Meters
(N)	Display Units
(O)	Sensor Controllers
(P)	Switching Mode Power Supplies
(Q)	Stepper Motors & Drivers & Controllers
(R)	Graphic/ Logic Panels
(S)	Field Network Devices
(T)	Software

# MP5S/MP5Y/MP5W Series


## ■ Comprehensive Device Management Program (DAQMaster)

- DAQMaster is comprehensive device management program for convenient management of parameters and multiple device data monitoring.
- Visit our website ([www.autonics.com](http://www.autonics.com)) to download user manual and comprehensive device management program.

< Computer specification for using software >

Item	Minimum requirements
System	IBM PC compatible computer with Intel Pentium III or above
Operations	Microsoft Windows 98/NT/XP/Vista/7/8/10
Memory	256MB+
Hard disk	1GB+ of available hard disk space
VGA	Resolution: 1024×768 or higher
Others	RS-232 serial port (9-pin), USB port

< DAQMaster screen >

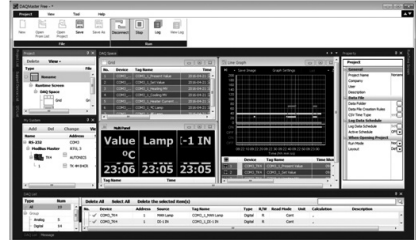

## ■ Cautions during Use

- Please separate the unit wiring from high voltage lines or power lines to prevent inductive noise.
- Install a power switch or circuit breaker to control the power supply.
- In case of 24VAC, 24-48VDC model, power supply should be insulated and limited voltage/current or Class 2 SELV power supply device.
- The power switch or circuit breaker should be installed where it is easily accessible by the user.
- Do not use the unit in the following environments.
  - ① Environments with high vibration or shock.
  - ② Environments with exposure to direct sunlight.
  - ③ Near machinery which produce strong magnetic force or electric noise.
- Storing the unit  
When storing the unit for an extended period, please avoid direct exposure to sunlight. Ambient temperature should be between -20°C to 60°C and ambient humidity should be between 35% to 85%RH. Store in factory packaging for best results.
- Input line  
Please use a shield wire in environments where noise may occur or instances where long measurement input lines are required.
- Please maintain distance between the power supply line and measurement input line.
- This product may be used in the following environments
  - ① Indoors
  - ② Max. altitude: 2,000m
  - ③ Pollution degree 2
  - ④ Installation category II